



Remove the pad pin plug rubber and loosen the pad pin.

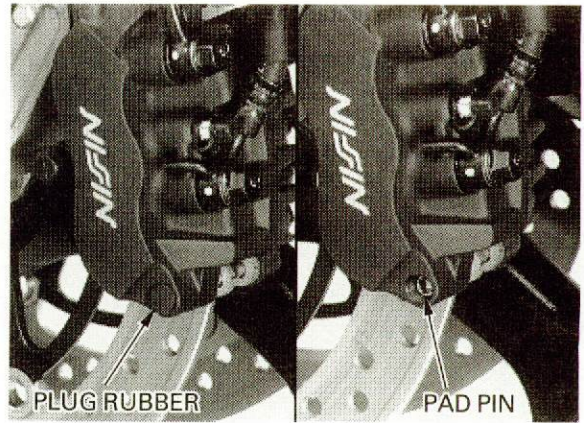

Remove the pad pin and brake pads.

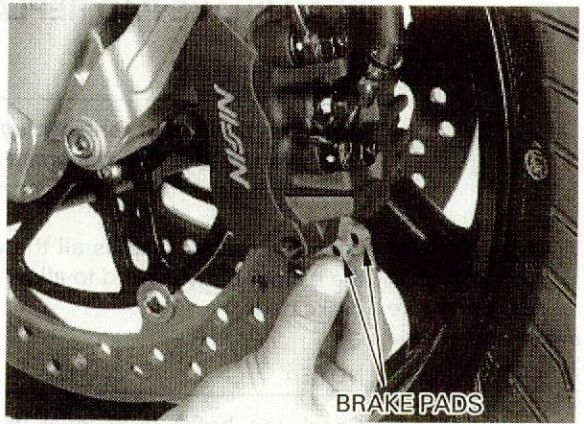

Clean the inside of the caliper especially around the caliper pistons.

Make sure the brake pad spring is in place.
Install the new brake pads.
Push the brake pads against the pad spring, then install the pad pin.



Tighten the pad pin to the specified torque.

TORQUE: 18 N·m (1.8 kgf·m , 13 lbf·ft)

