



LIGHTS/METERS/SWITCHES

Remove the screws and harness clamp, then remove the combination meter sub-harness. Remove the tachometer/coolant temperature gauge and speedometer from the case.

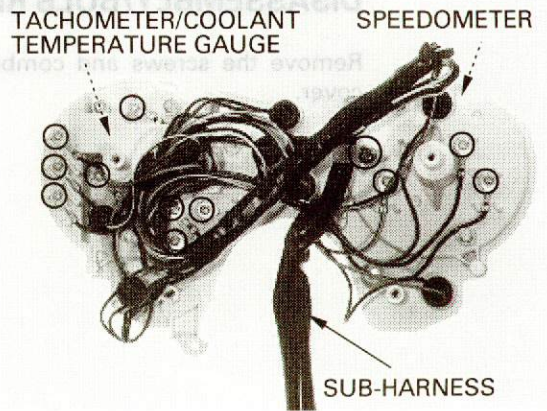

ASSEMBLY

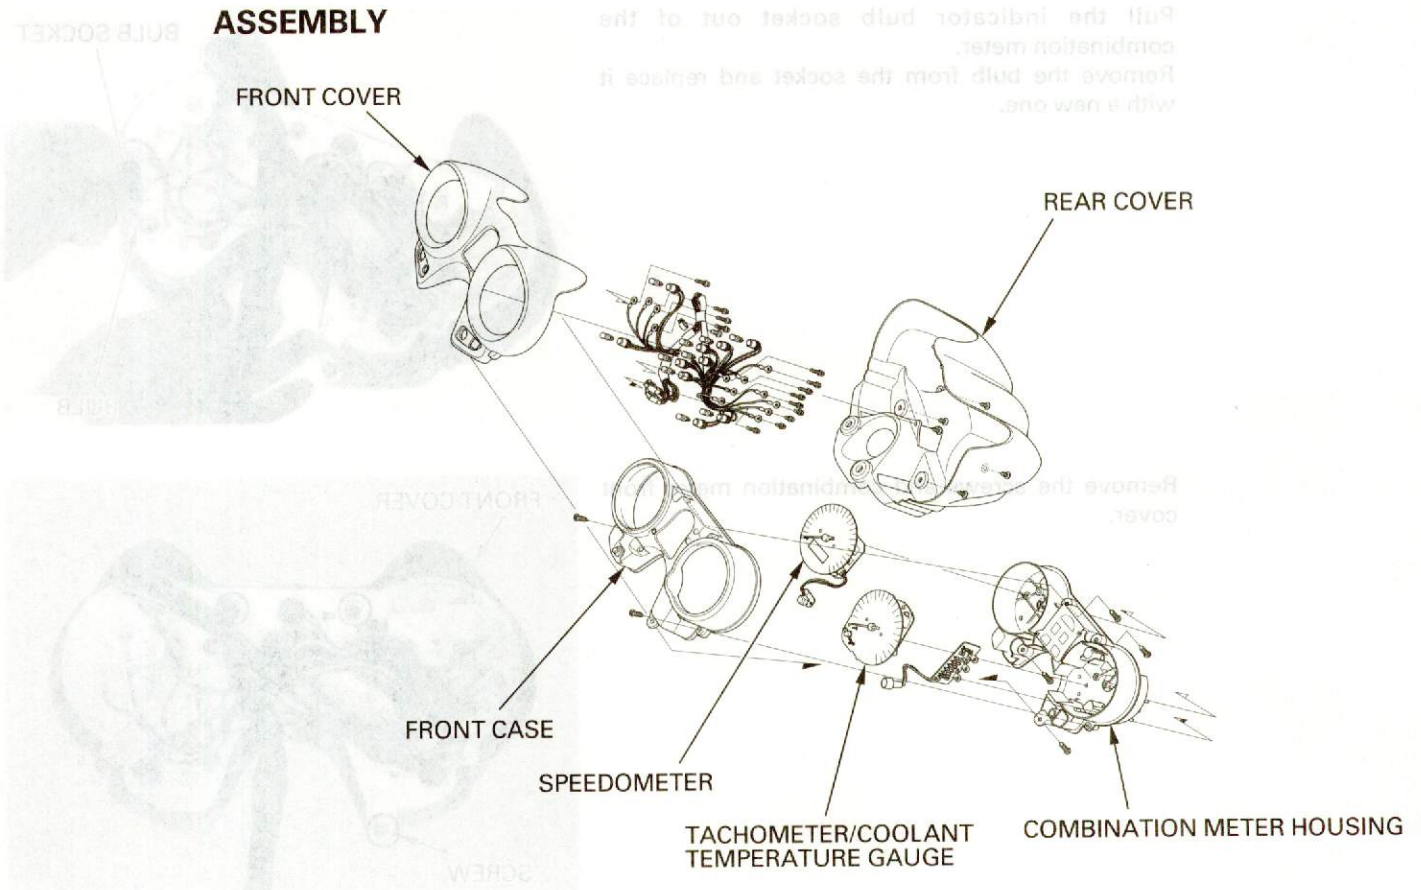

Assemble the combination meter in the reverse order of removal.

NOTE:

Route the sub-harness properly.

