
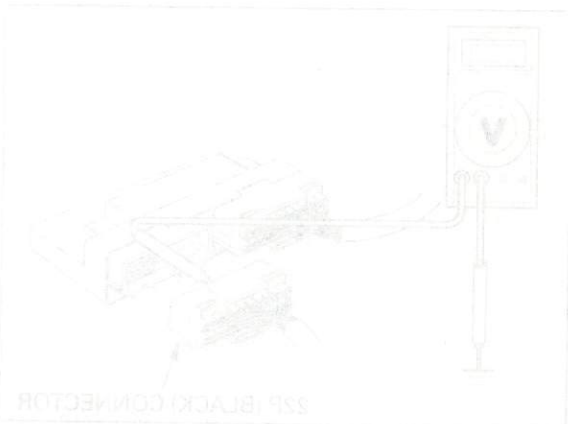


Diagnostic code  is indicated (Code signals cannot send or receive)

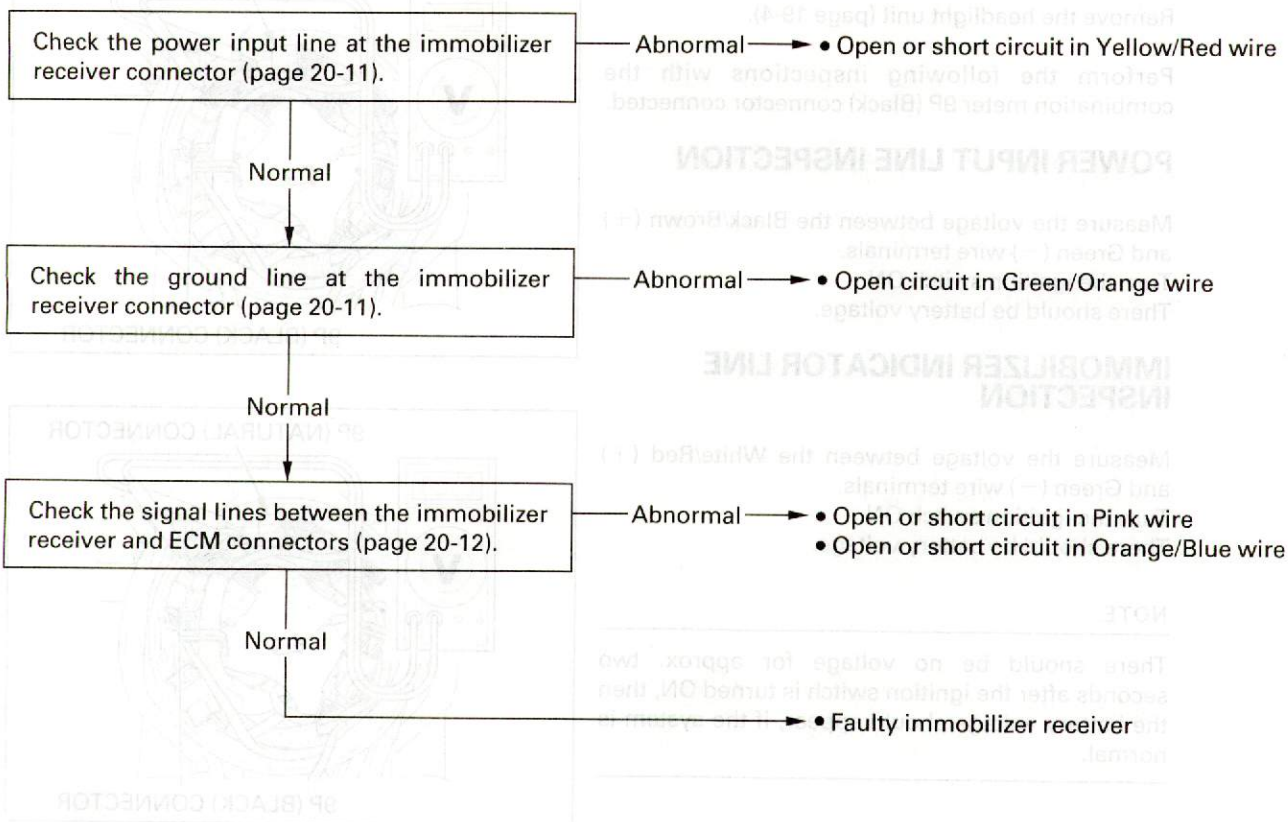

IMMOBILIZER INDICATOR LINE INSPECTION

Remove the seat (page 2-2).


Disconnect the ECM 25P multi-connector.

Perform the following inspections at the wire harness side connector of the ECM.

Measure the voltage between the White/Red wire terminal (+) and ground (-).

Turn the ignition switch ON.

There should be battery voltage.

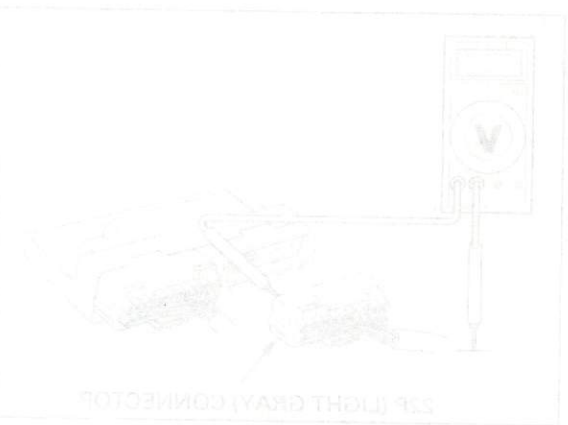

POWER INPUT LINE INSPECTION

Measure the voltage between the Black/White wire terminal (+) and ground (-).

Turn the ignition switch ON.

There should be battery voltage.