



- ① Oil pump drive gear
- ② 4×14.8 mm pin
- ③ Oil pump right cover
- ④ 46×2 "O" ring
- ⑤ 4×8 dowel pin
- ⑥ Inner rotor B
- ⑦ Outer rotor B
- ⑧ "O" ring collar
- ⑨ 15×2.5 "O" ring
- ⑩ Oil pump gasket

- ⑪ Oil pump body
- ⑫ 11×15×3 Oil seal
- ⑬ Outer rotor A
- ⑭ Inner rotor A
- ⑮ Oil pump left cover
- ⑯ 6×59 flat screw
- ⑰ 6 mm flat washer
- ⑱ 6×32 hex bolt
- ⑲ Relief spring cap
- ⑳ Relief valve spring

- ㉑ Relief valve
- ㉒ Oil pump base
- ㉓ Oil strainer screen
- ㉔ Oil leak stopper seal
- ㉕ Oil leak stopper valve
- ㉖ Oil leak stopper spring
- ㉗ 15×2.5 "O" ring
- ㉘ Oil leak stopper cap
- ㉙ 6 mm flat washer
- ㉚ 6 mm hex bolt

Fig. 3-17