

<b>16-8 STARTER LIGHTING IGNITION SWITCH</b> .....	164
a. Description.....	164
b. Disassembly.....	164
c. Inspection.....	164
d. Reassembly.....	164
<b>16-9 TURN SIGNAL LIGHT/HORN SWITCH</b> .....	165
a. Description.....	165
b. Disassembly.....	165
c. Inspection.....	165
d. Reassembly.....	165
<b>16-10 HORN</b> .....	165
a. Description.....	165
b. Disassembly.....	165
c. Inspection.....	166
d. Reassembly.....	166
<b>16-11 STOP SWITCH (FRONT)</b> .....	166
a. Description.....	166
b. Disassembly.....	166
c. Inspection.....	166
d. Reassembly.....	166
<b>16-12 STOP SWITCH (REAR)</b> .....	166
a. Description.....	166
b. Disassembly.....	166
c. Inspection.....	166
d. Reassembly.....	167
<b>16-13 OIL PRESSURE SWITCH</b> .....	167
a. Description.....	167
b. Disassembly.....	167
c. Inspection.....	167
d. Reassembly.....	167
<b>16-14 NEUTRAL SWITCH</b> .....	167
a. Description.....	167
b. Disassembly.....	167
c. Inspection.....	167
d. Reassembly.....	167
<b>16-15 WIRE HARNESS</b> .....	168
a. Description.....	168
b. Disassembly.....	168
c. Inspection.....	168
d. Reassembly.....	170