

Exhaust Pipe Removal

Remove the following:

- Lower fairing (page 2-6)
- Radiator (page 6-4)
- Mufflers

Remove the exhaust pipe joint nuts.

Remove the exhaust pipe mounting bolt and exhaust pipe.

Remove the gaskets.

Install the exhaust pipe and mufflers in the reverse order of removal.

NOTE

- Always replace the exhaust pipe gaskets and muffler gaskets with new ones.
- At installation, loosely install all fasteners, and tighten the exhaust pipe joint nuts first, then tighten the muffler clamp bolts and the mounting bolts.

Torque:

Exhaust pipe joint nut: 17 N·m (1.7 kg-m, 12 ft-lb)

Muffler clamp bolt: 22 N·m (2.2 kg-m, 16 ft-lb)

Muffler/exhaust pipe mounting bolt:
22 N·m (2.2 kg-m, 16 ft-lb)

