

⚠ WARNING

- A contaminated brake disc or pad reduces stopping power. Discard contaminated pads and clean a contaminated disc with a high quality brake degreasing agent.

NOTE

- When servicing the rear wheel, place the motorcycle on its center stand.
- Do not operate the brake pedal or lever after the rear wheel is removed.
- Adjust the drive chain free play after installing the wheel.

Procedure		Qty	Remarks
	Removal Order		Installation is in the reverse order of removal.
(1)	Rear axle nut	1	<ul style="list-style-type: none"> • Loosen the drive chain adjuster fully, then remove the axle nut. • Move the rear wheel forward, and derail the drive chain from the driven sprocket.
(2)	Rear axle washer	1	
(3)	Rear axle	1	
(4)	Rear wheel	1	
(5)	Right side collar	1	
(6)	Left side collar	1	