


Front Brake Pad Replacement

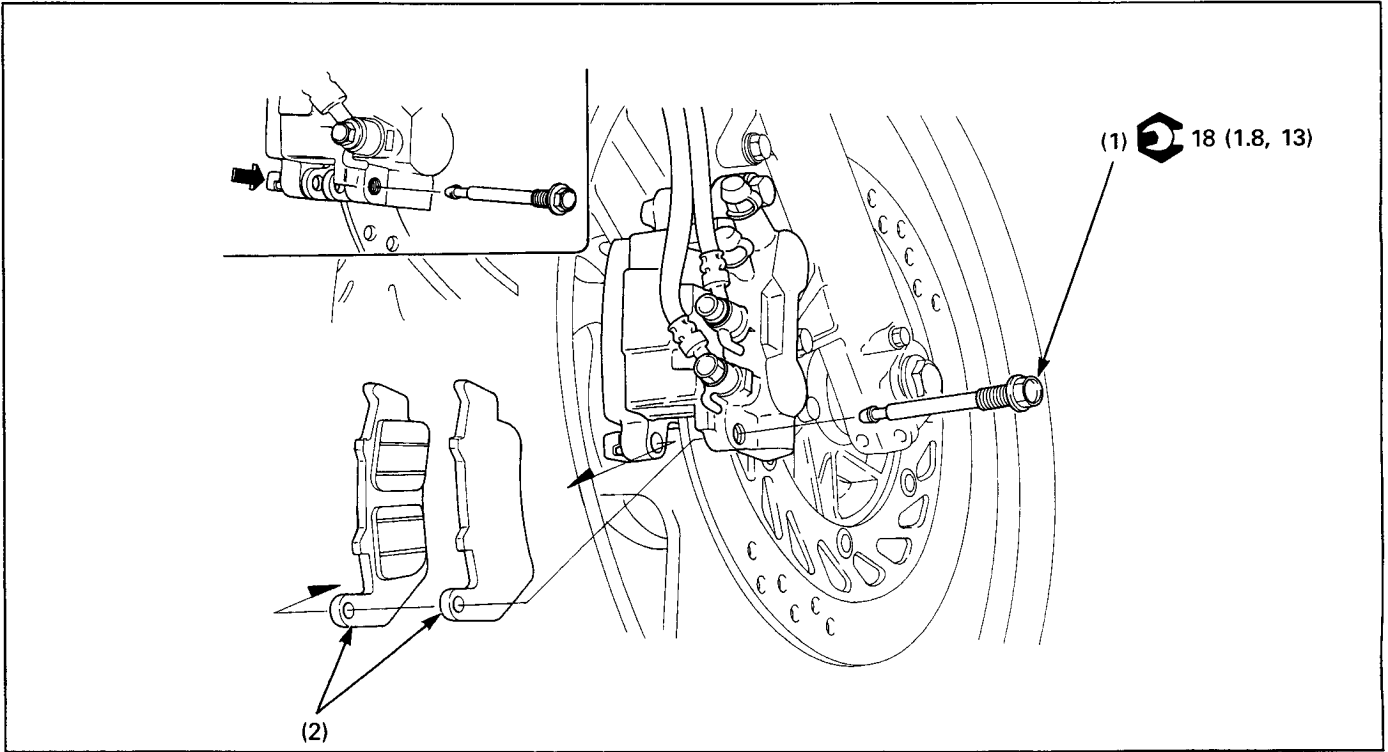

⚠ WARNING

- A contaminated brake disc or pad reduces stopping power. Discard contaminated pads and clean a contaminated disc with a high quality brake degreasing agent.
- Check the brake system by applying the brake lever and pedal after pad replacement.

NOTE

- The brake pad replacement can be serviced without disconnecting the hydraulic system.
- Clean the caliper inside especially around the caliper pistons before installing the brake pads.
- Always replace the brake pads in pairs to assure even disc pressure.
- Operate the brake lever and pedal to seat the caliper pistons against the pads after the pad replacement.

Procedure		O'ty	Remarks
(1)	Removal Order Pad pin bolt	1	Installation is in the reverse order of removal. At removal, remove the pad pin while pushing the retainer.
(2)	Brake pad	2	