

# Bulb Replacement

## Headlight Bulb

**⚠ WARNING**

- Halogen headlight bulb becomes very hot while the headlight is ON, and remain hot for a while after it is turned OFF. Be sure to let it cool down before servicing.

Remove the maintenance lid (2-6).


Remove the headlight bulb socket and dust cover. Push the retaining tabs.

Unhook the bulb retainer and remove the headlight bulb.

Installation is in the reverse order of removal.

**NOTE**

- Install the dust cover with its "TOP" mark facing up.

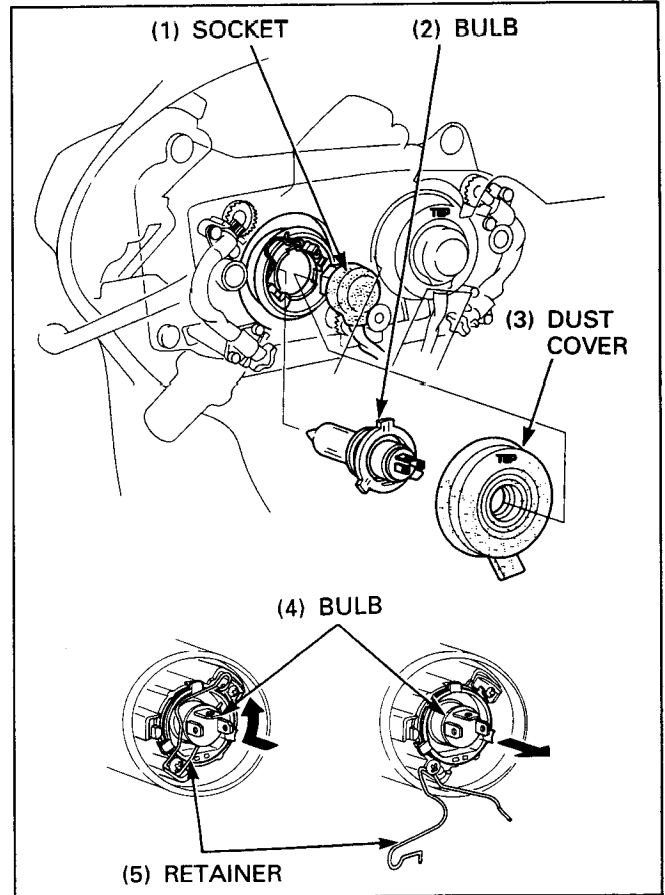


## Tail/Brake Light

Remove the seat (page 2-3).

Remove the tail/brake light bulb and socket as an assembly by turning it counterclockwise.

Replace a new bulb and install it in the reverse order of removal.

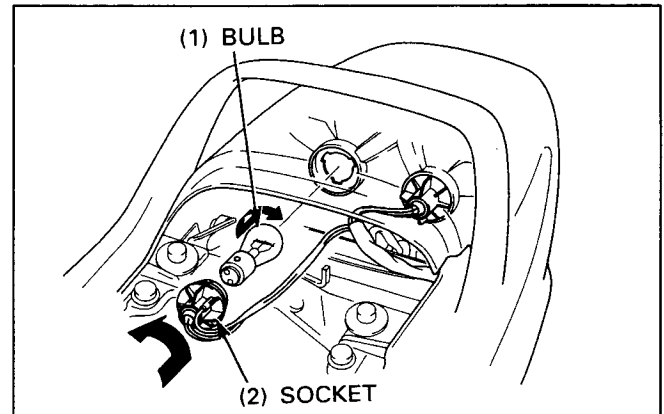

## Turn Signal Bulb

### Front

Remove the inner cover (page 2-8).

Remove the front turn signal bulb and socket as an assembly by turning it counterclockwise.

Replace a new bulb and install it in the reverse order of removal.

