

### Rear

Remove the screw, lens and rubber.

Remove the rear turn signal bulb by turning it counter-clockwise.

Replace a new bulb and install it in the reverse order of removal.

### NOTE

- Align the lug on the lens with the slot in the light case properly.

