


Add the recommended engine oil to the upper level mark.

RECOMMENDED ENGINE OIL:

HONDA GN4 4-stroke oil or equivalent motor oil
 API service classification: SF or SG
 Viscosity: 10W-40

NOTE: -

Other viscosities shown in the chart may be used when the average temperature in your riding area is within the indicated range.

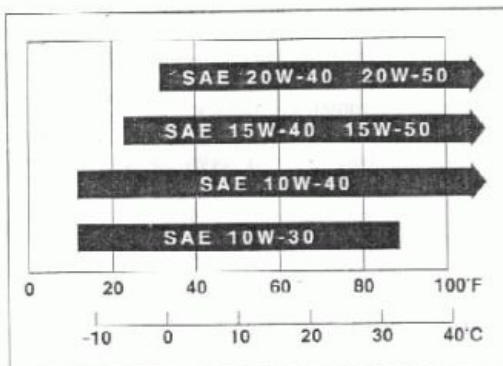

Reinstall the filler cap and dipstick.

ENGINE OIL & FILTER CHANGE

▲WARNING

If the engine must be running to do some work, make sure the area is well-ventilated. Never run the engine in an enclosed area. The exhaust contains poisonous carbon monoxide gas that may cause loss of consciousness and may lead to death.

Warm up the engine.

NOTE:

Change the engine oil with the engine warm and the motorcycle on level ground to assure complete draining.

Remove the lower cowl (page 2-3).

Stop the engine and remove the oil filler cap and drain bolt.
 Drain the oil completely.

CAUTION:

Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.

Remove and discard the oil filter cartridge using the special tool.

TOOL:
 Oil filter wrench

07HAA-PJ70100

