


PGM-FI MALFUNCTION INDICATOR 18 BLINKS (CAM PULSE GENERATOR)

Turn the ignition switch to "OFF".

Disconnect the cam pulse generator 2P connector.
Check for loose or poor contact on the cam pulse generator 2P connector.

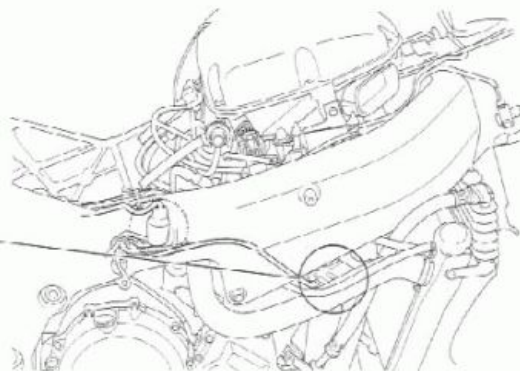

Connect the cam pulse generator 2P connector.
Place the motorcycle on its side stand.
Turn the ignition switch to "ON" and check that the malfunction indicator blinks.

Does not blink

• Loose or poor contacts on the cam pulse generator 2P connector.

18 blinks


Turn the ignition switch to "OFF" and the engine stop switch off.
Disconnect the cam pulse generator 2P connector.



Check the continuity between the cam pulse generator connector terminal and ground.

Continuity

• Faulty cam pulse generator.

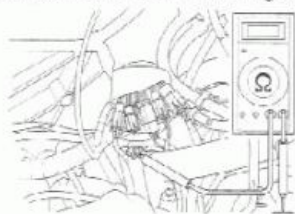

Connection: White/yellow - Ground
Gray - Ground
Standard: No continuity

No continuity