


PGM-FI MALFUNCTION INDICATOR 19 BLINKS (IGNITION PULSE GENERATOR)

Turn the ignition switch to "OFF".

Disconnect the ignition pulse generator 2P connector.
Check for loose or poor contact on the cam pulse generator 2P connector.

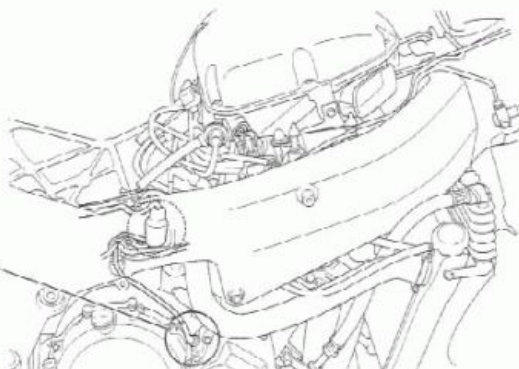

Connect the ignition pulse generator 2P connector.
Place the motorcycle on its side stand.
Turn the ignition switch to "ON" and check that the malfunction indicator blinks.

Does not blink

• Loose or poor contacts on the ignition pulse generator 2P connector.

19 blinks


Turn the ignition switch to "OFF" and the engine stop switch off.
Disconnect the ignition pulse generator 2P connector.



Turn the ignition switch to "OFF".
Check for continuity between the ignition pulse generator connector terminal and ground.

Continuity

• Faulty ignition pulse generator.

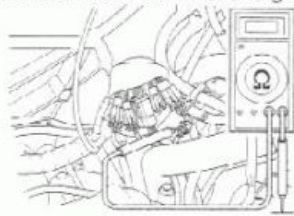

Connection: White/yellow—Ground
Yellow—Ground
Standard: No continuity

No continuity