

FUEL TANK

REMOVAL

Disconnect the fuel level/reserve sensor 3P black connector.



Support the rear end of the fuel tank (page 5-55).
Release the fuel pressure (page 5-55).

Disconnect the fuel pump 2P brown connector.



Disconnect the fuel tank air vent hose and overflow hose.



Disconnect the fuel hose sealing nut and sealing washers.

Temporarily install the 12 × 30 mm bolt (pitch 1.75) and sealing washers to the fuel hose banjo, then tighten the sealing nut.

