

FUEL SYSTEM (Programmed Fuel Injection)

Connect the fuel pump 2P brown connector.



Connect the fuel tank air vent hose and overflow hose to the fuel tank.




Connect the fuel return hose to the throttle body.

Connect the fuel hose banjo to the throttle body with new sealing washers.

While pushing the fuel hose banjo stopper to the throttle body, install and tighten the sealing nut to the specified torque.

TORQUE: 22 N·m (2.2 kgf·m , 16 lbf·ft)

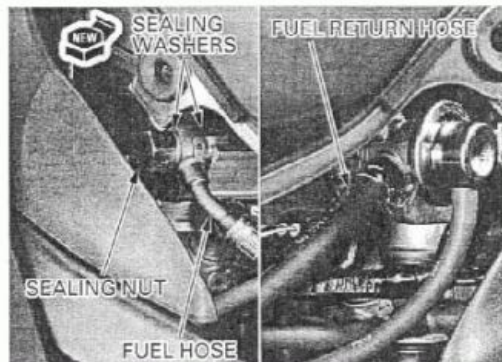

Remove the support tools from the rear end of the fuel tank.

Install the inner cover boss into the fuel tank grommets.

