


FUEL SYSTEM (Programmed Fuel Injection)

Remove the air funnel/air cleaner housing mounting screws, then remove the air funnels.

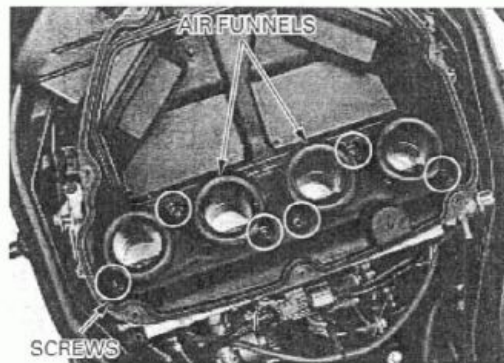

Release the air cleaner housing from the ram ducts.


Disconnect the crankcase breather hose from the air cleaner housing.

Remove the air cleaner housing.



INSTALLATION

Check that the throttle body O-ring is in good condition, replace if necessary.

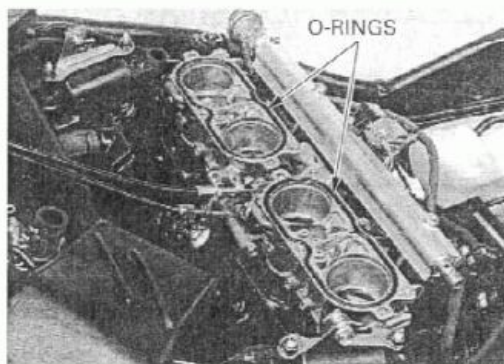

Connect the crankcase breather hose to the air cleaner housing.

Install the air cleaner housing onto the throttle body while aligning its air intake openings with the ram ducts.

