

REMOVAL (AFTER '99)

Remove the following:

- Fuel tank (page 5-61)
- Air cleaner housing (page 5-65)

Do not snap the throttle valve from full open to full close after the throttle cable has been removed. It may cause incorrect idle operation.

- Remove the throttle stop screw from the guide.
- Remove the throttle cable guide bracket mounting bolts.
- Disconnect the throttle cable ends from the throttle drum.
- Disconnect the No. 1/4 ignition primary wires.
- Disconnect the throttle body 14P connector.
- Disconnect the water hoses from the fast idle wax unit.

Loosen the engine side insulator band screws.
Remove the throttle body from the cylinder head.

Disconnect the connectors from the each sensor and injector, then remove the throttle body sub-harness from the throttle body.

