



FUEL SYSTEM (Programmed Fuel Injection)

Install the starter valve assembly into the valve hole.

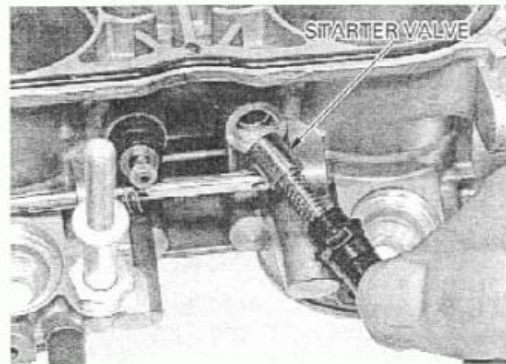


Tighten the starter valve lock nut to the specified torque.

TORQUE: 2 N·m (0.18 kgf·m , 1.3 lbf·ft)

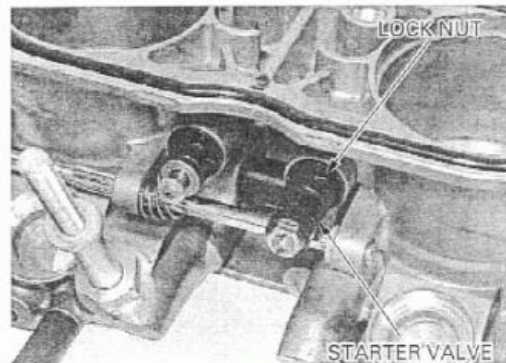

Install and tighten the wax unit link bracket screw to the specified torque.

TORQUE: 1 N·m (0.09 kgf·m , 0.7 lbf·ft)

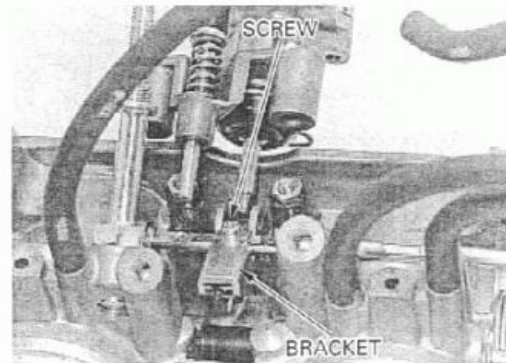

No. 3/4 starter valve:

Hook the return spring end with the No.3/4 starter valve arm.

Install and tighten the starter valve arm mounting screws to the specified torque.

TORQUE: 1 N·m (0.09 kgf·m , 0.7 lbf·ft)

