

O₂ SENSOR (AFTER '99 CALIFORNIA TYPE ONLY)

REMOVAL

▲WARNING

Do not service the O₂ sensor while the it is hot.

CAUTION:

- *Handle with care the O₂ sensor.*
- *Do not get grease, oil or other materials in the O₂ sensor air holes.*

Remove the lower cowl (page 2-3).
Support the front end of the fuel tank (page 3-6).

Disconnect the O₂ sensor 4P connector.

Remove the O₂ sensor unit.

CAUTION:

- *Be careful not to damage the sensor wire.*
- *Do not use an impact wrench to remove or install the O₂ sensor.*


Install the O₂ sensor unit.
Tighten the unit to the specified torque.

TORQUE: 25 N·m (2.5 kgf·m , 18 lbf·ft)


Route the sensor wires properly, then connect the O₂ sensor 4P connector.

Install the lower cowl (page 2-4).

O₂ SENSOR CONNECTOR

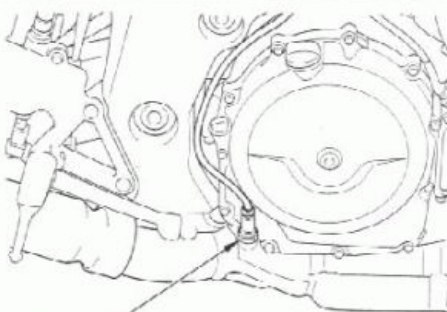

O₂ SENSOR

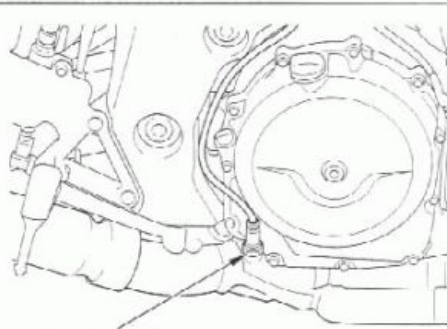

O₂ SENSOR

O₂ SENSOR CONNECTOR

