



COOLING SYSTEM

Remove the nut and cooling fan.

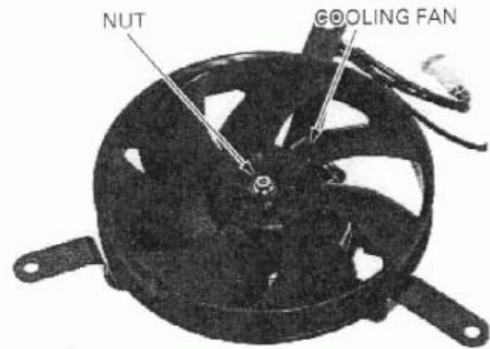

Remove the collar from the fan motor shaft.
Remove the flange nuts and fan motor from the bracket.

For fan motor switch information, refer to page 19-23.

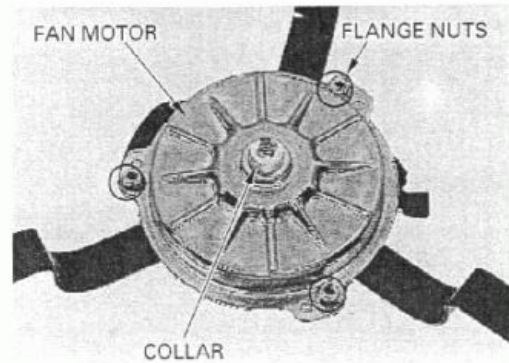

ASSEMBLY

'99:

2 N·m (0.25 kgf·m, 1.8 lbf·ft)

18 N·m (1.8 kgf·m, 13 lbf·ft)

