



## CLUTCH

## REMOVAL

Remove the clutch spring bolts, springs and pressure plate.

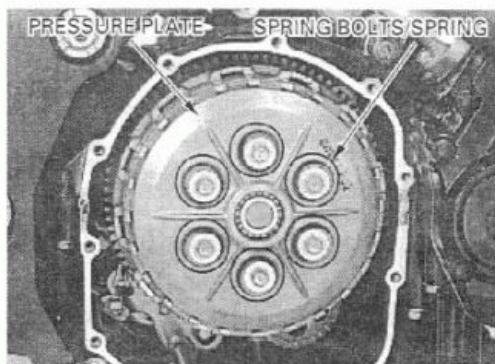


Remove the clutch lifter piece and lifter rod.

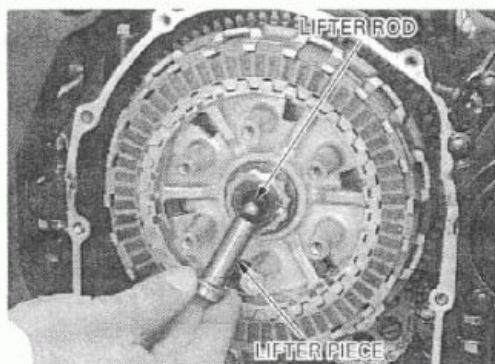

Remove the following:

- Seven clutch discs
- Six clutch plates

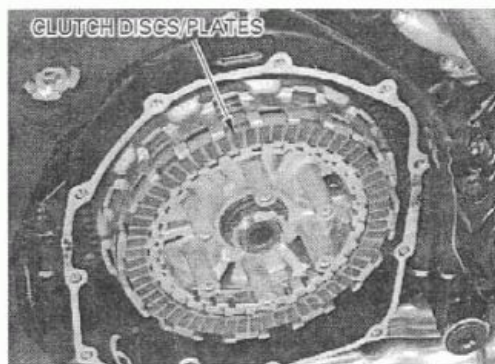

Unstake the clutch center lock nut.

