



Remove the shift fork shaft and shift forks.

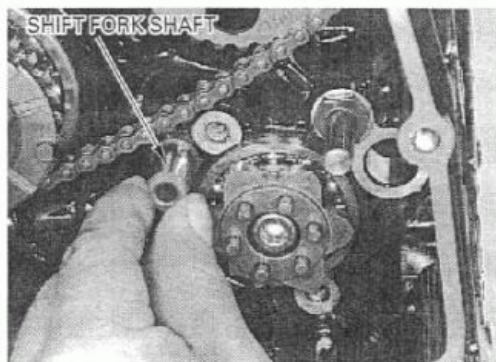

Remove the shift drum bearing and shift drum.

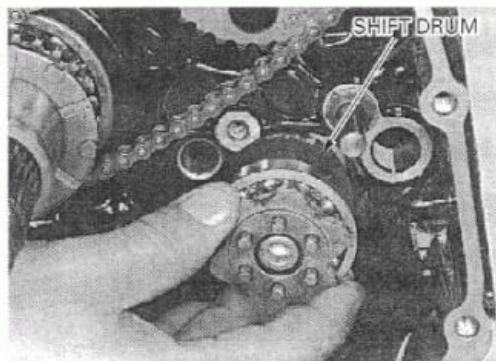

SHIFT DRUM/SHIFT FORK INSPECTION


Check the shift fork and fork shaft for wear or damage.

Measure the I.D. of the shift fork.

SERVICE LIMIT: 12.03 mm (0.474 in)

Measure the shift fork claw thickness.

SERVICE LIMIT: 5.9 mm (0.23 in)

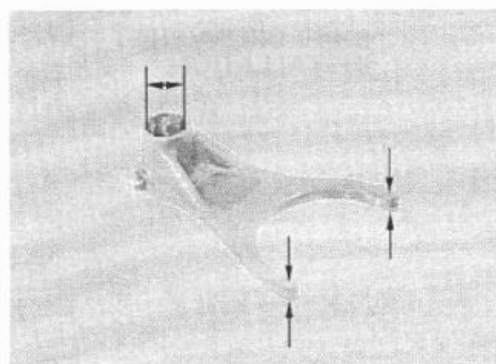

Measure the O.D. of the shift fork shaft.

SERVICE LIMIT: 11.95 mm (0.470 in)

