


ASSEMBLY

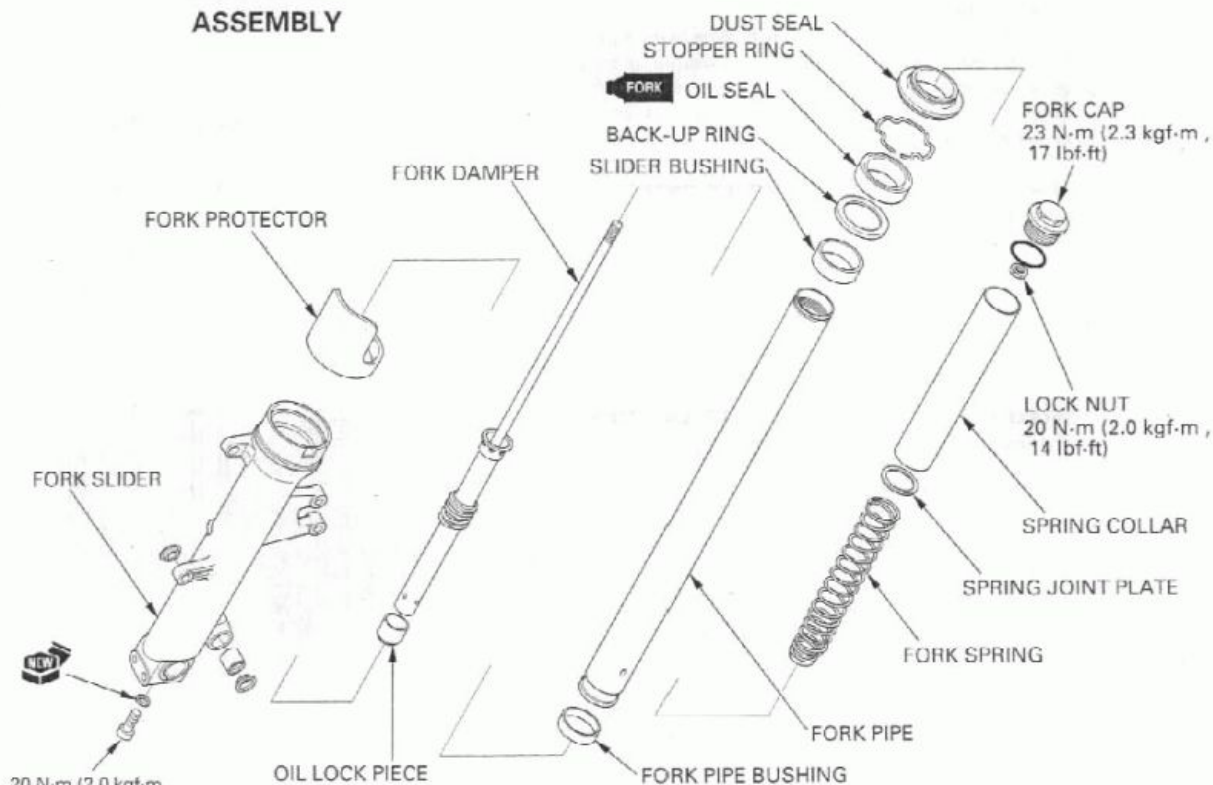


Before assembly, wash all parts with a high flash point or non-flammable solvent and wipe them dry.

Install a new fork pipe bushing if the bushing has been removed.

Install the oil seal with its marked side facing up.

Apply fork fluid to the oil seal lips. Install the fork pipe into the fork slider.

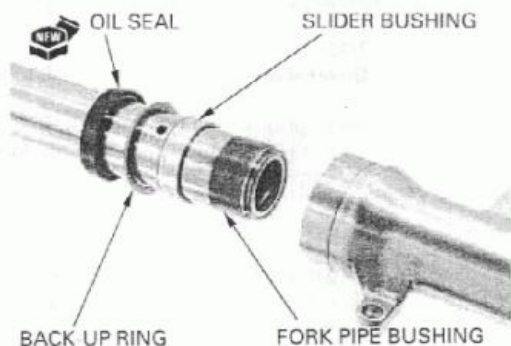

Drive the oil seal in using the special tools.

TOOL:
Slider weight
Oil seal driver

07947-KA50100
07947-KA40200 or
07NMD-KZ3010A
(U.S.A. only)

