


INSTALLATION


If the end of the adjusting bolt does protrude, it will not be possible to install the swingarm.

Install the swingarm adjusting bolt. Be sure that the tip of the bolt does not protrude inward.

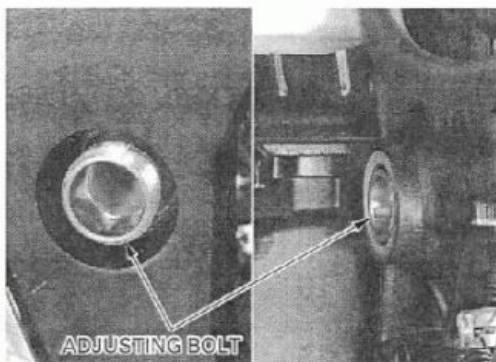


Apply thin coat of grease to the swingarm pivot bolt surface. Install the swingarm and pivot bolt.

Push the pivot bolt's hex shank into the adjusting bolt's socket head. Screw the adjusting nut by turning the pivot bolt.

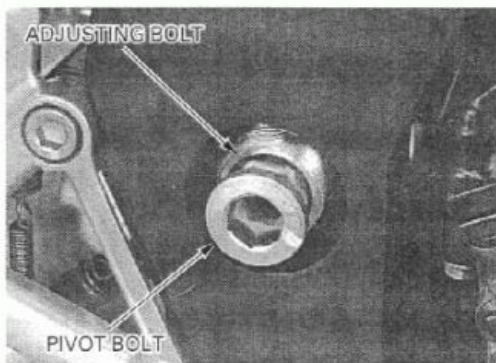

Tighten the swingarm pivot adjusting bolt with the pivot bolt.

TORQUE: 15 N·m (1.5 kgf·m , 11 lbf·ft)

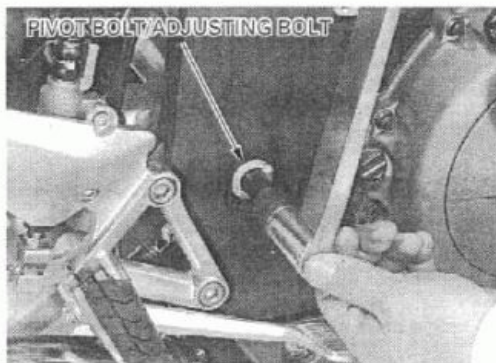

Install and tighten the swingarm pivot adjusting bolt lock nut fully by hand, then tighten the lock nut to the specified torque while holding the pivot bolt using the special tool.

TOOL:
Pivot adjusting wrench 07908 4690003

TORQUE: 64 N·m (6.5 kgf·m , 47 lbf·ft)

