

HEADLIGHT

BULB REPLACEMENT

▲WARNING

A halogen headlight bulb becomes very hot while the headlight is on, and remains hot for a while after it is turned off. Be sure to let it cool down before servicing.

Remove the upper cowl covers (page 2-5).

Remove the headlight bulb connectors.
Remove the dust cover.

Unhook the bulb retainer and remove the headlight bulb/socket.

CAUTION:

Avoid touching halogen headlight bulbs. Fingerprints can create hot spots that cause a bulb to break.

If you touch the bulb with your bare hands, clean it with a cloth moistened with denatured alcohol to prevent early bulb failure.

Remove the headlight bulb from the socket.

Install a new bulb into the socket.

Install the headlight bulb/socket aligning its tabs with the groove in the headlight unit.

