


Suspension Linkage Disassembly/Assembly

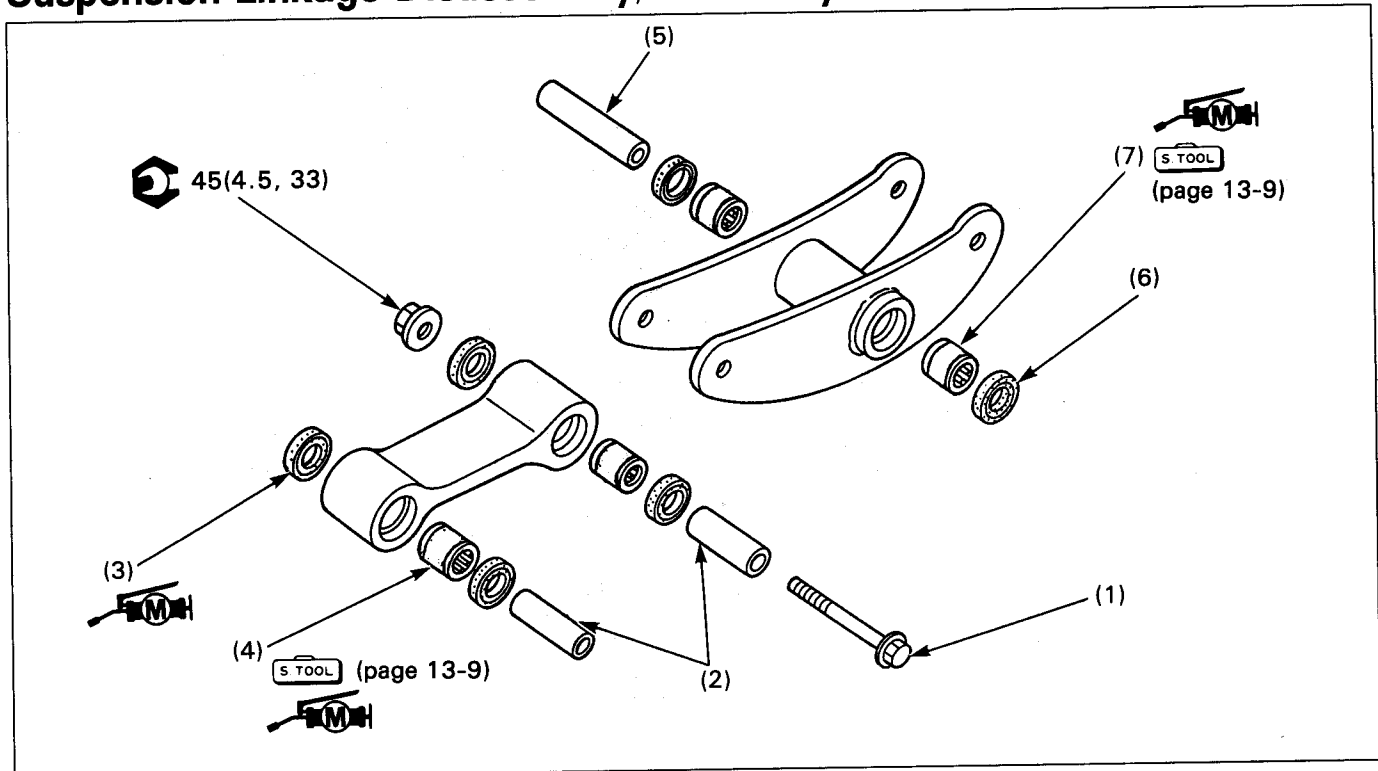

NOTE

- Assemble the shock link and shock arm with the arrow mark "←F MV9" pointing forward.

Requisite Service

- Shock linkage removal/installation(page 13-7)

Procedure	Q'ty	Remarks
Removal Order		Installation is in the reverse order of removal.
(1) Shock arm bolt	1	
(2) Shock link pivot collar	2	
(3) Dust seal	4	
(4) Shock link pivot needle bearing	2	Refer to page 13-9 for replacement.
(5) Shock arm pivot collar	1	
(6) Dust seal	2	
(7) Shock arm pivot needle bearing	1	Refer to page 13-9 for replacement.