

18. Lights/Meters/Switches

Service Information	18-1	Combination Meter Disassembly/Assembly	18-6
System Location	18-2	Tachometer Inspection	18-8
Headlight Bulb Replacement	18-3	Coolant Temperature Gauge Inspection	18-8
Combination Meter Bulb Replacement	18-4	Ignition Switch Removal/Installation	18-8
Combination Meter Removal/Installation	18-5	Side Stand Switch	18-9

Service Information

⚠ WARNING

- **A halogen headlight bulb becomes very hot while the headlight is ON, and remains hot for a while after it is turned OFF. Be sure to let it cool down before servicing.**
 - **Use a flame and heated water/coolant mixture for the thermo sensor inspection. Keep all flammable materials away from the burner. Wear protective clothing gloves and eye protection.**
- Note the following when replacing the halogen headlight bulb.
- Wear clean gloves while replacing the bulb. Do not put finger prints on the headlight bulb, as they may create hot spots on the bulb and cause it to break.
 - If you touch the bulb with your bare hands, clean it with a cloth moistened with alcohol to prevent its early failure.
 - Be sure to install the dust cover after replacing the bulb.
- Check the battery condition before performing any inspection that requires proper battery voltage.
 - A continuity test can be made with the switches installed on the vehicle.