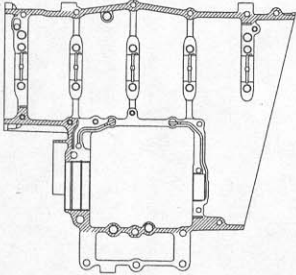
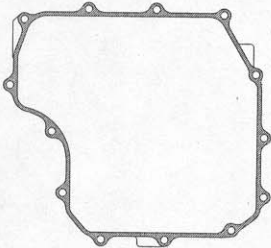
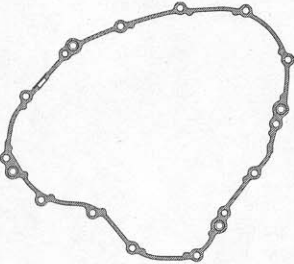
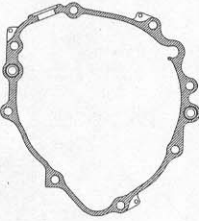
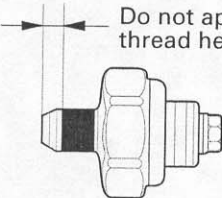


LUBRICATION & SEAL POINTS

ENGINE

LOCATION	MATERIAL	REMARKS		
<p>Crankcase mating surface</p> 	<p>Liquid sealant (Three Bond 1207B or equivalent)</p>			
<p>Oil pan mating surface</p> 			<p>Liquid sealant (Three Bond 1207B or equivalent)</p>	
<p>Right crankcase cover mating surface</p> 				
<p>Alternator cover mating surface</p> 				
<p>Oil pressure switch threads</p>  <p>Do not apply sealant to the thread head 3 - 4 mm (0.1 - 0.2 in)</p>				