

FRAME/BODY PANELS/EXHAUST SYSTEM

Install the seat rail to the frame.

Install the upper mounting bolts/nuts and lower mounting bolts/collars/nuts.

Tighten the bolts and nuts to the specified torque.

TORQUE:

- Upper mounting flange nut:
54 N·m (5.5 kgf·m, 40 lbf·ft)
- Lower mounting flange bolt:
44 N·m (4.5 kgf·m, 36 lbf·ft)


Tighten the four seat rail brace socket bolts and seat rail assembly flange nuts to the specified torque.

TORQUE:

- Seat rail brace socket bolt:
26 N·m (2.7 kgf·m, 20 lbf·ft)
- Seat rail assembly flange nut:
30 N·m (3.1 kgf·m, 22 lbf·ft)

Install the following:

- Battery tray (page 17-7)
- Fuel tank (page 6-61)
- Rear fender (page 3-18)
- Muffler (page 3-22)

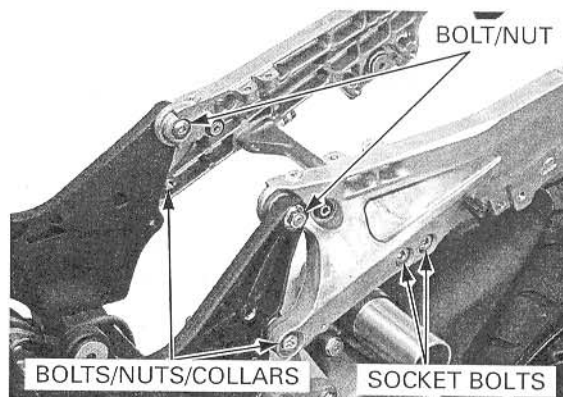


MUFFLER

REMOVAL

Remove the following:

- Lower cowls (page 3-6)
- Rear cowl (page 3-5)

Remove the two bolts, washer and muffler guard.

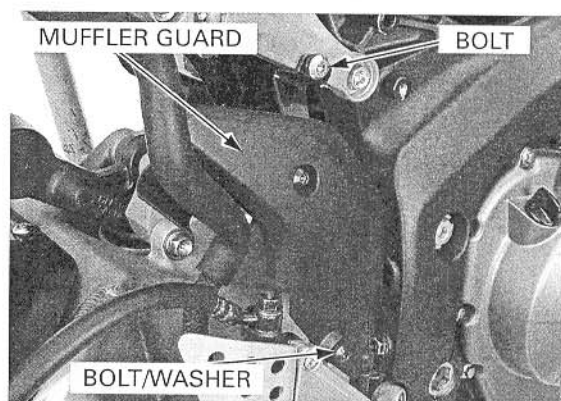

Remove the bolt and rear brake reservoir tank.

