



FRAME/BODY PANELS/EXHAUST SYSTEM


Remove the radiator lower mounting bolt/nut, then move the radiator forward.

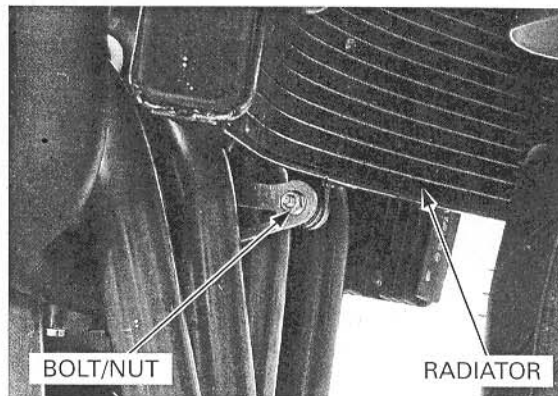

Remove the exhaust pipe joint nuts.

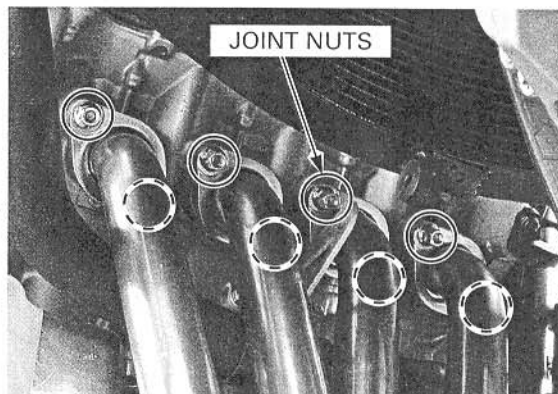

Remove the bolts/nut/washers and exhaust pipe.

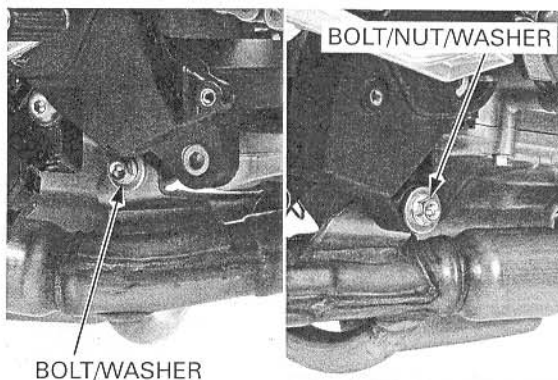

Remove the exhaust pipe gaskets.

