


SYSTEM DIAGRAM

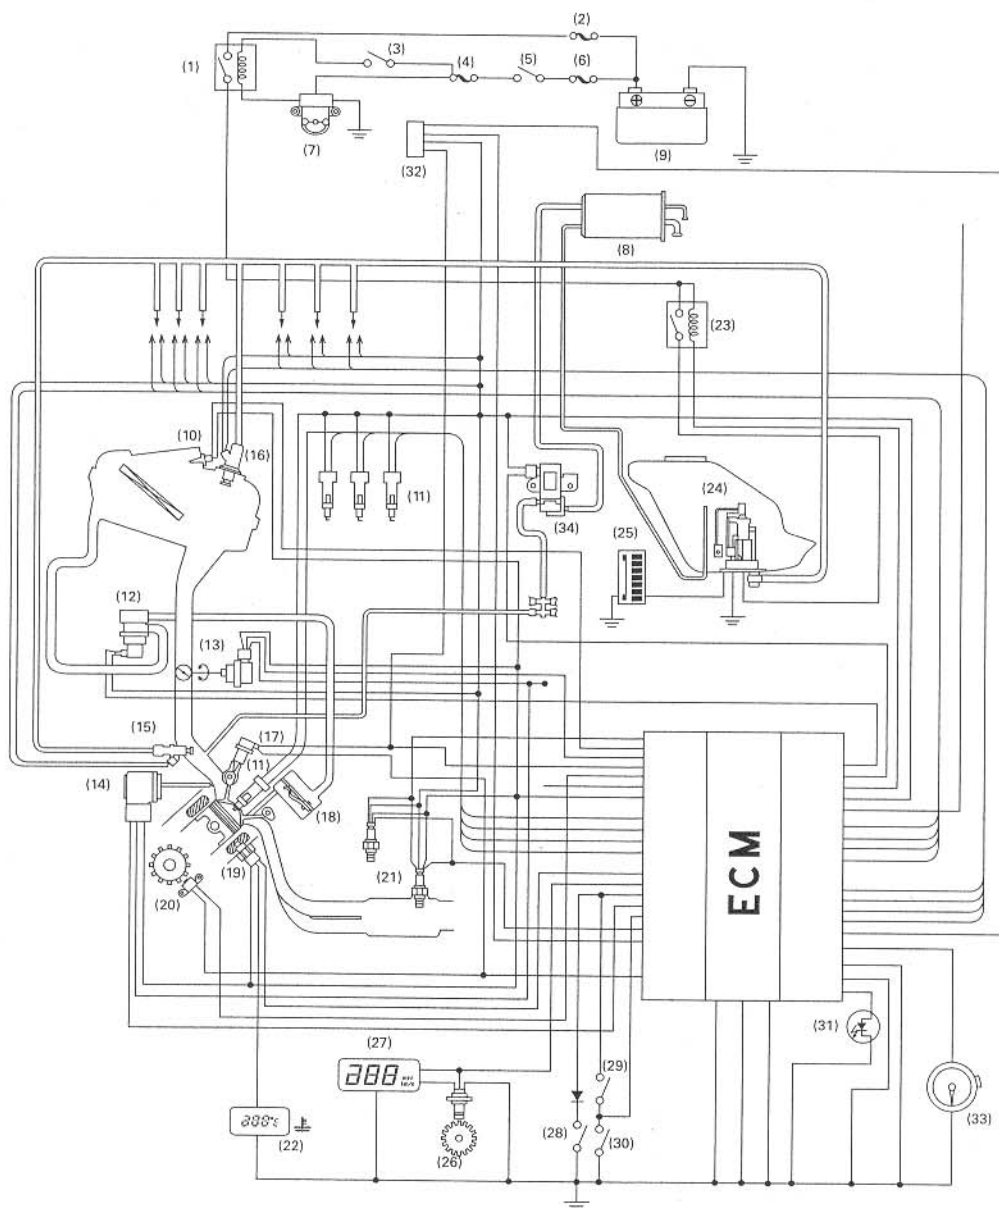

- | | |
|--------------------------------------|---|
| (1) Engine stop relay | (19) ECT sensor |
| (2) PGM-FI fuse (20A) | (20) Ignition pulse generator |
| (3) Engine stop switch | (21) O ₂ sensor (California type only) |
| (4) Sub-fuse (10A) | (22) Water temperature LCD |
| (5) Ignition switch | (23) Fuel cut-off relay |
| (6) Main fuse A (30A) | (24) Fuel pump unit |
| (7) Bank angle sensor | (25) Fuel indicator |
| (8) EVAP canister (California type) | (26) Vehicle speed sensor |
| (9) Battery | (27) Speedometer |
| (10) IAT sensor | (28) Neutral switch |
| (11) Direct ignition coil/spark plug | (29) Clutch switch |
| (12) PAIR control solenoid valve | (30) Side stand switch |
| (13) TP sensor | (31) Malfunction indicator lamp (MIL) |
| (14) MAP sensor | (32) Data link connector |
| (15) Primary injector | (33) Tachometer |
| (16) Secondary injector | (34) EVAP purge control solenoid valve (California type only) |
| (17) Cam pulse generator | |
| (18) PAIR check valve | |