

## FUEL SYSTEM (Programmed Fuel Injection)

### MIL 33 BLINKS (E<sup>2</sup>-PROM)

#### 1. Recheck MIL Blinks 1

Reset the self-diagnosis memory data (page 6-9).  
Turn the ignition switch ON and engine stop switch "Q".  
Check that the MIL blinks.

**Does the MIL blink 33 times?**

**YES** - Replace the ECM with a known good one, and recheck.

**NO** - GO TO STEP 2.

#### 2. Recheck MIL Blinks 2

Turn the ignition switch OFF.


Short the data link connector with the SCS service connector (070PZ-ZY30100).

Turn the ignition switch ON and engine stop switch "Q".  
Check that the MIL blinks.

**Does the MIL blink 33 times?**

**YES** - GO TO STEP 3.

**NO** - Intermittent failure

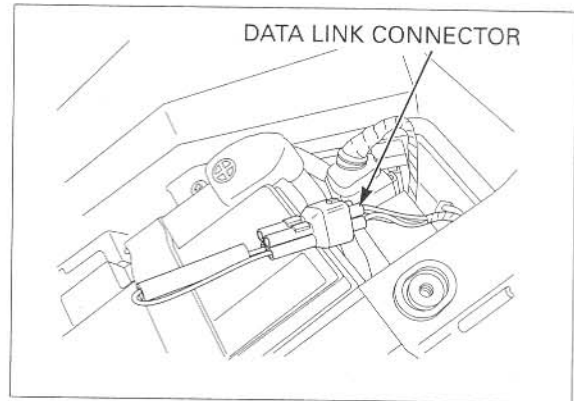

#### 3. Recheck MIL Blinks 3

Reset the self-diagnosis memory data (page 6-9).  
Turn the ignition switch ON and engine stop switch "Q".  
Check that the MIL blinks.

**Does the MIL blink 33 times?**

**YES** - Replace the ECM with a known good one, and recheck.

**NO** - Intermittent failure