

## FUEL SYSTEM (Programmed Fuel Injection)


Connect the ohmmeter to the fuel cut-off relay connector terminals.

**Connection: A - B**

Connect the 12V battery to the following fuel cut-off relay connector terminals.

**Connection: C (+) - D (-)**

There should be continuity only when the 12V battery is connected. If there is no continuity when the 12V battery is connected, replace the fuel cut-off relay.

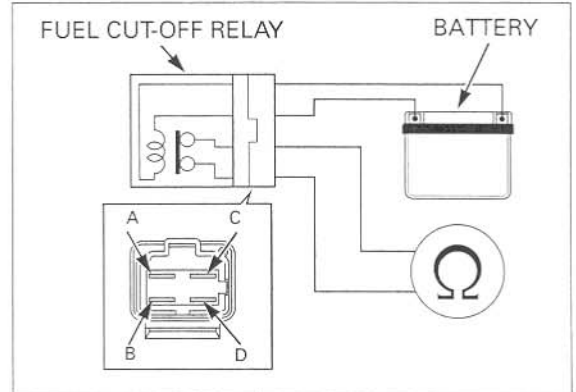


## FUEL TANK


### REMOVAL

Remove the fuel tank cover (page 3-15).

Remove the fuel tank mounting bolts.

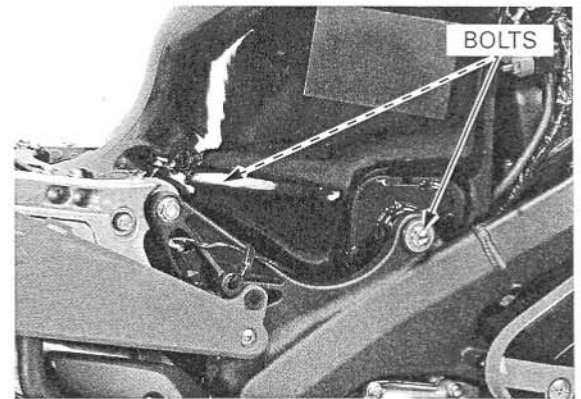

Lift the fuel tank and support it using a suitable support.

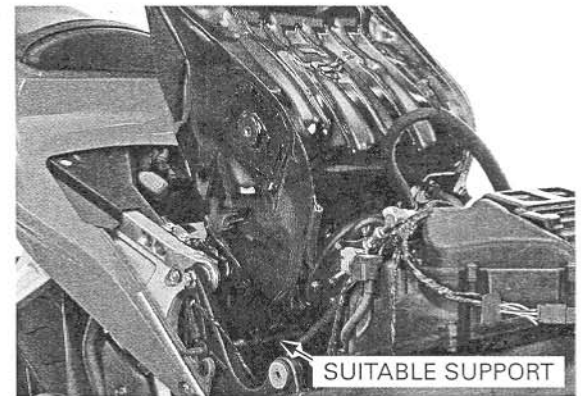

Disconnect the fuel pump unit 3P (Black) connector.

