

## FUEL SYSTEM (Programmed Fuel Injection)

Disconnect the fuel tank air vent and overflow hoses.

Cover the fuel hose banjo bolt with a rag or shop towel.



Slowly loosen the banjo bolt and catch the remaining fuel using an approved gasoline container.

Remove the fuel hose banjo bolt and sealing washers, then disconnect the fuel hose.

- Before disconnecting fuel hoses, release the fuel pressure by loosening the fuel hose banjo bolt at the fuel tank.
- Failure to release the fuel pressure could result in fuel spilling onto painted or plastic parts, which will be damaged.
- Always replace the sealing washers when the fuel hose banjo bolt is removed or loosened.

Remove the fuel tank pivot bolts, collars and fuel tank.

Refer to procedures for fuel pump unit removal (page 6-59).

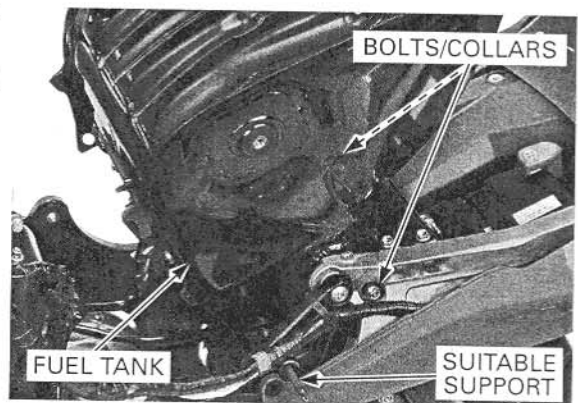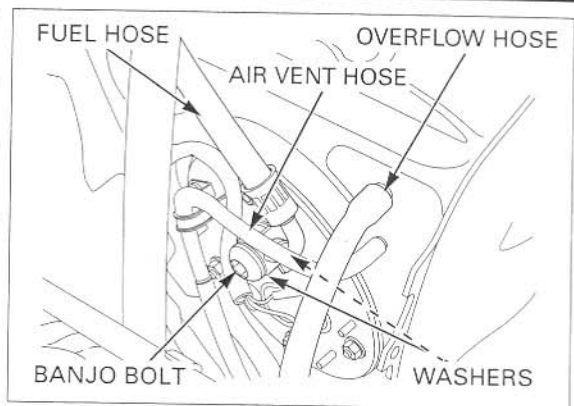

## INSTALLATION

