


## FUEL SYSTEM (Programmed Fuel Injection)

### INSTALLATION


Connect the crankcase breather hose to the air cleaner housing.

Install the wire band and secure the wires.

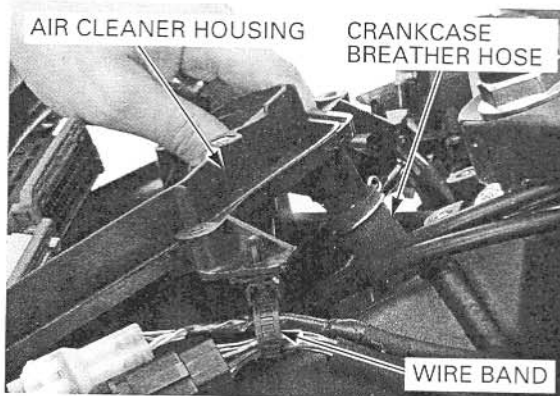


Connect the PAIR air suction hose to the air cleaner housing.

Install the air cleaner housing onto the throttle body.

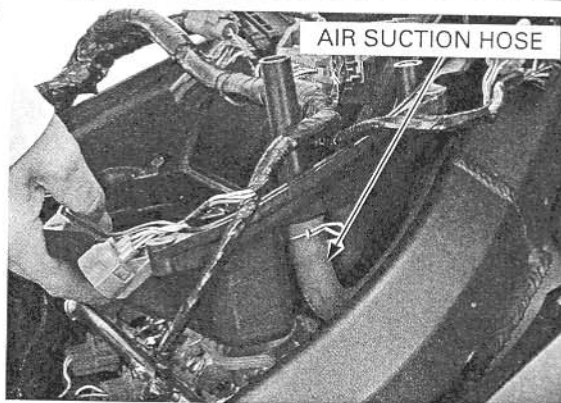

Install the air funnels in their proper locations.  
Install and tighten the air funnel/air cleaner housing mounting screws.

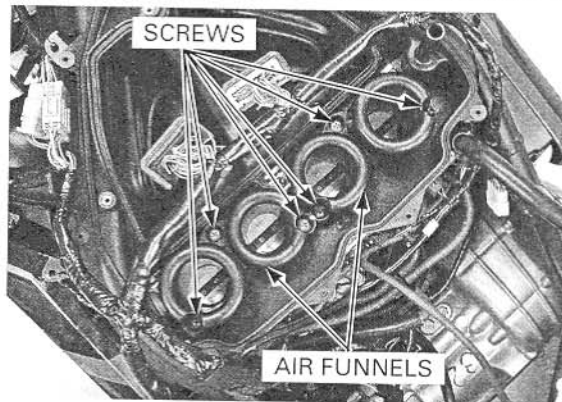

Install the upper air cleaner housing and eight screws.  
Tighten the screws securely.

