


FUEL SYSTEM (Programmed Fuel Injection)

Mark the starter valves during disassembly so they can be placed back in their original locations.

Loosen the lock nut and remove the starter valves.

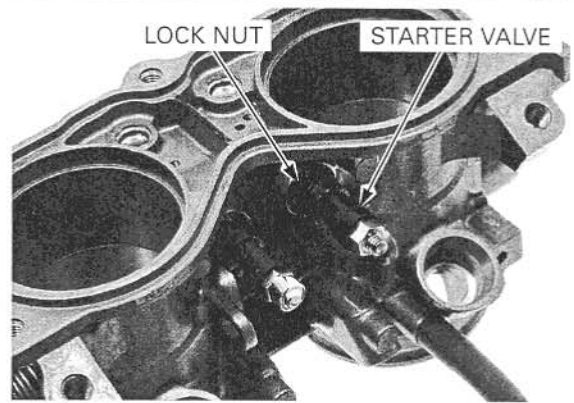

Check the starter valve for scratches, scoring or other damage, replace it if necessary.

STARTER VALVE



Do not apply commercially available carburetor cleaners to the inside of the throttle bore, which is coated with molybdenum.

Clean the starter valve bypasses using compressed air.

