



FUEL SYSTEM (Programmed Fuel Injection)

ASSEMBLY

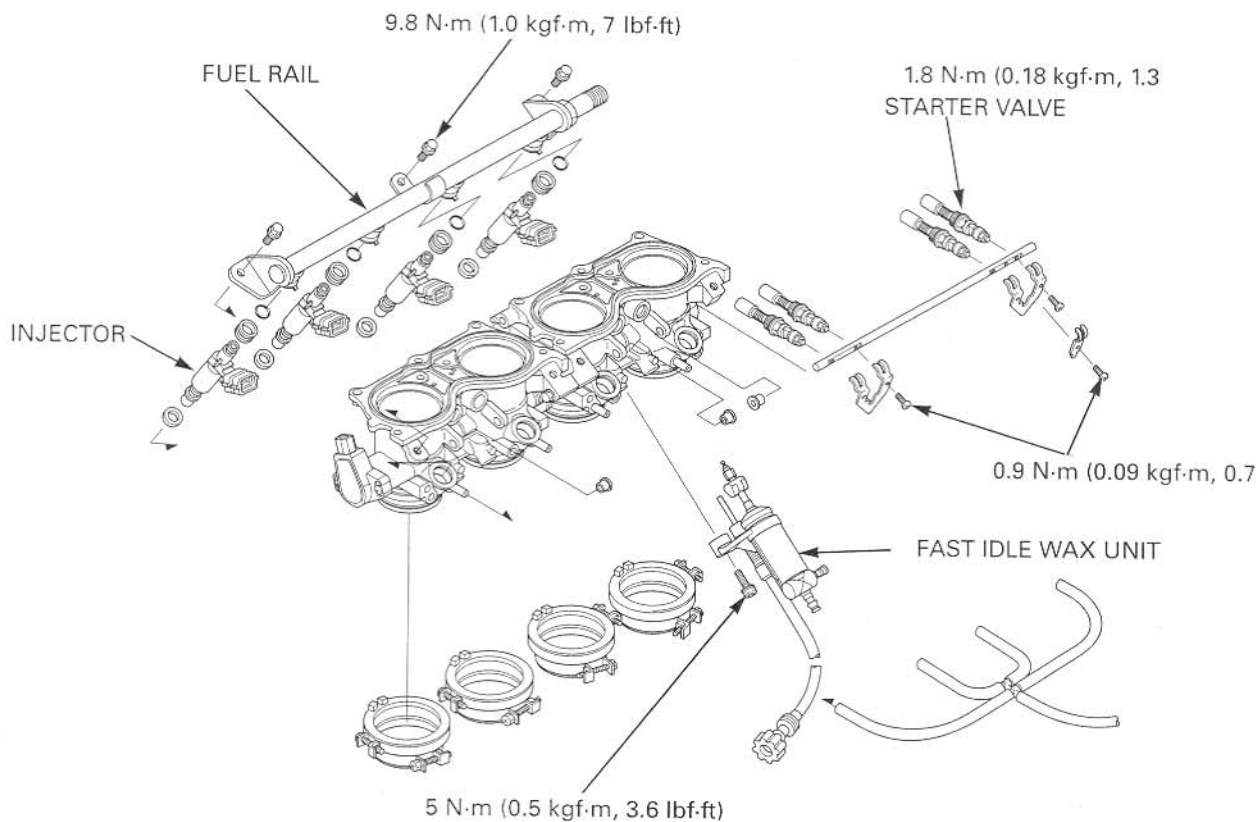

Install the starter valves into the valve holes.

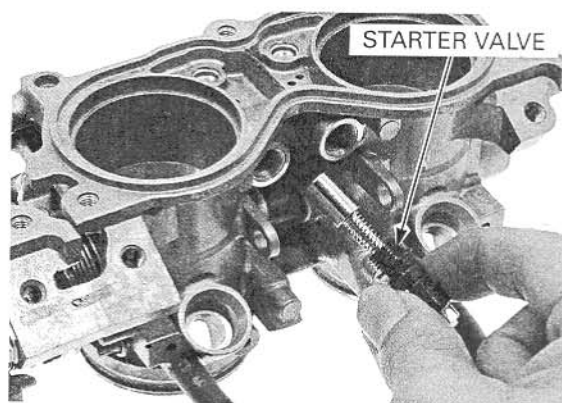

Tighten the starter valve lock nut to the specified torque.

TORQUE: 1.8 N·m (0.18 kgf·m, 1.3 lbf·ft)

