


VALVE LIFTER BORE

Inspect each valve lifter bore for scratches or abnormal wear.

Measure the each valve lifter bore I.D.

SERVICE LIMIT: 26.04 mm (1.025 in)

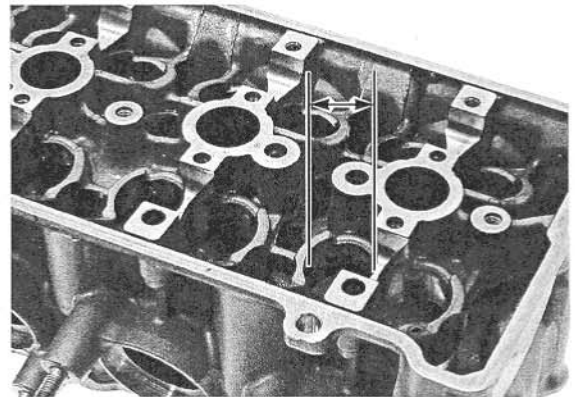

VALVE LIFTER

Inspect each valve lifter for scratches or abnormal wear.

Measure the each valve lifter O.D.

SERVICE LIMIT: 25.97 mm (1.022 in)




VALVE SPRING

Measure the free length of the inner and outer valve springs.

SERVICE LIMITS:

- IN:** Inner: 35.1 mm (1.38 in)
- Outer: 38.8 mm (1.53 in)
- EX:** Inner: 34.4 mm (1.35 in)
- Outer: 38.1 mm (1.50 in)


Replace the springs if they are shorter than the service limits.

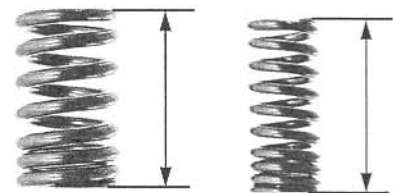

CAM CHAIN TENSIONER/CAM CHAIN GUIDE

Inspect the cam chain tensioner A and cam chain guide A for excessive wear or damage, replace them if necessary.

CAM CHAIN TENSIONER A

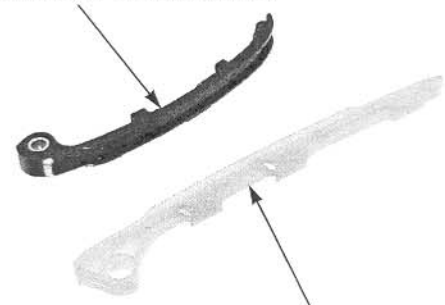

CAM CHAIN GUIDE A