



CRANKCASE/TRANSMISSION


Remove the shift drum assembly.

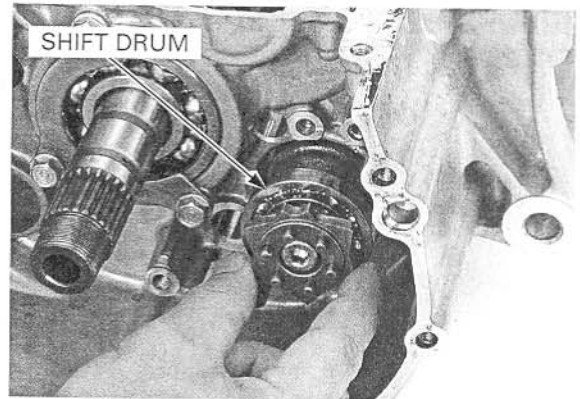

Remove the mainshaft bearing set plate bolts and plate.

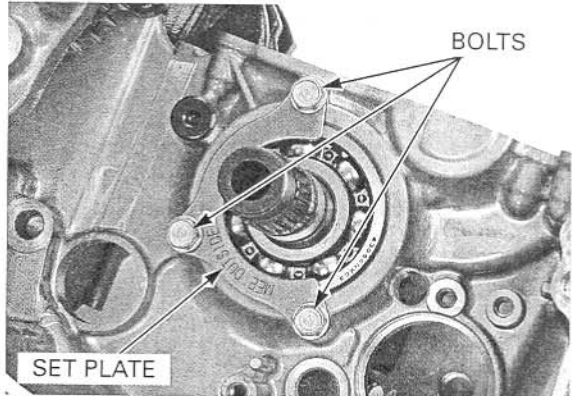

Remove the mainshaft bearing from the crankcase.
Check the mainshaft bearing for smooth rotation,
abnormal wear or damage.

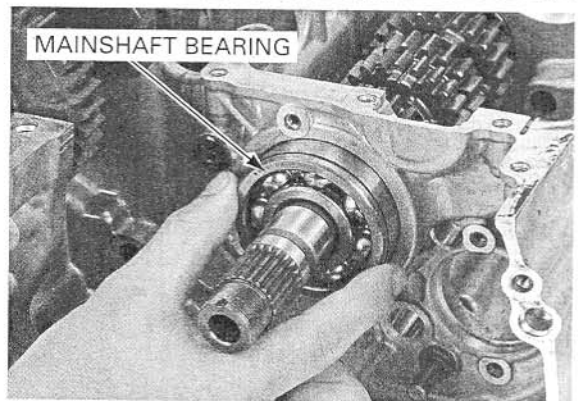

Remove the mainshaft assembly.
Disassemble the mainshaft.
Clean all disassembled parts in solvent thoroughly.

