



FRONT WHEEL/SUSPENSION/STEERING


Remove the screws and left handlebar switch housing.

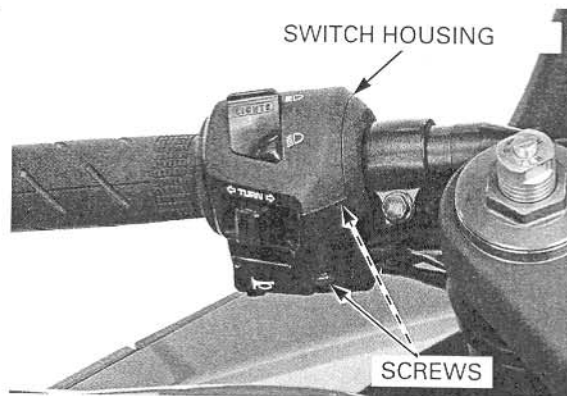

Remove the screw and left handlebar weight. Remove the handle grip from the handlebar.

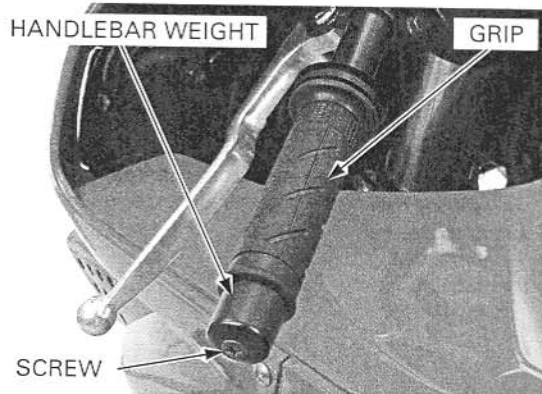

Loosen the clutch lever bracket pinch bolt. Disconnect the clutch switch connectors from the clutch switch.

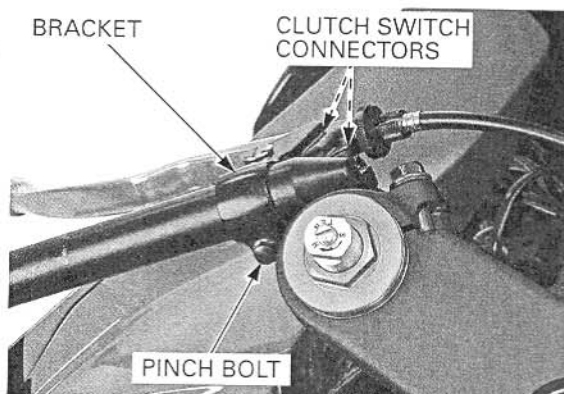

Remove the steering stem cap, top bridge pinch bolts, handlebar pinch bolts and setting plates.

Remove the steering stem nut and top bridge.

Remove the handlebars from the fork tube.

Remove the clutch lever bracket from the left handlebar.

