



FRONT WHEEL/SUSPENSION/STEERING


Loosen the right axle pinch bolts.
Remove the axle bolt.

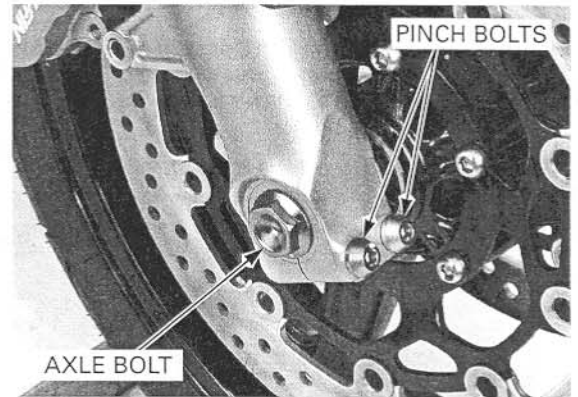

Loosen the left axle pinch bolts.
Remove the axle and front wheel.

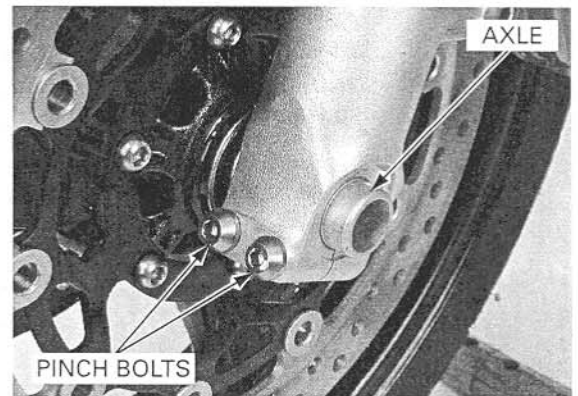

Remove the side collars.

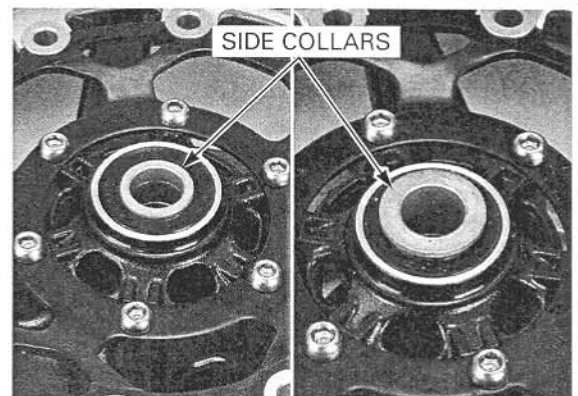

INSPECTION

Axle

Set the axle on V-blocks and measure the runout.
Actual runout is 1/2 the total indicator reading.

SERVICE LIMIT: 0.2 mm (0.008 in)

