


FRONT WHEEL/SUSPENSION/STEERING


Remove the steering stem nut cap and stem nut.
Remove the top bridge pinch bolts and top bridge.

Remove the following:

- Handlebars (page 14-7)
- Fork legs (page 14-18)

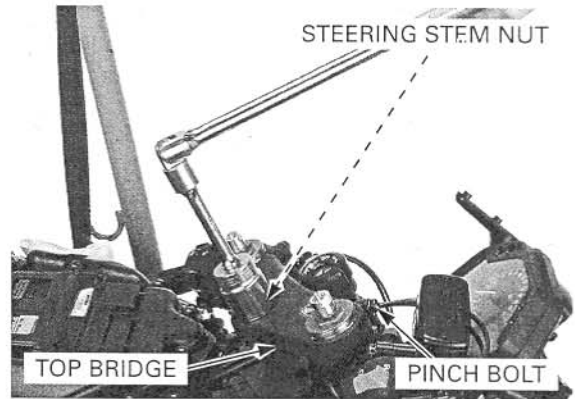


Remove the bolt and front brake hose clamp.

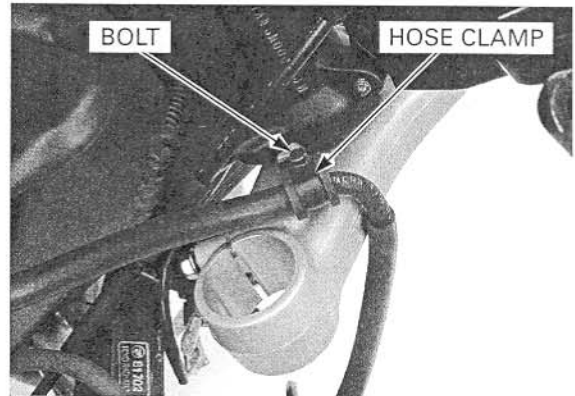

Straighten the tabs of the lock washer.

Remove the adjusting lock nut and lock washer.

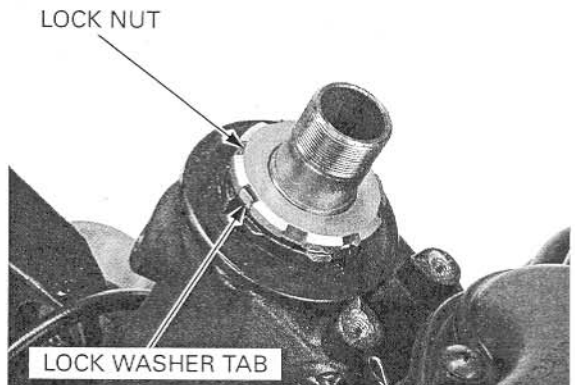

Remove the steering stem adjusting nut using the special tool.

TOOL:

Steering stem socket

07916-3710101 or
07916-3710100
(U.S.A. only)

