




Remove the diaphragm plate and diaphragm.

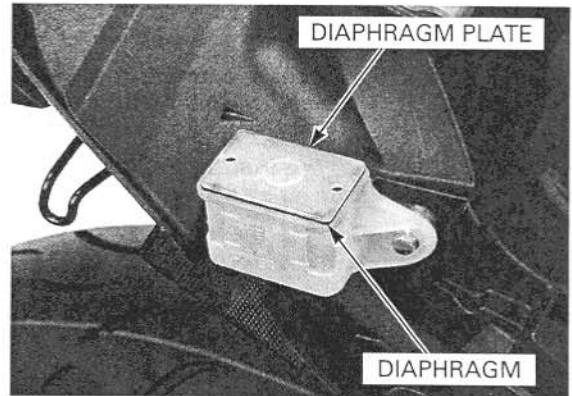

Connect a bleed hose to the caliper bleed valve.

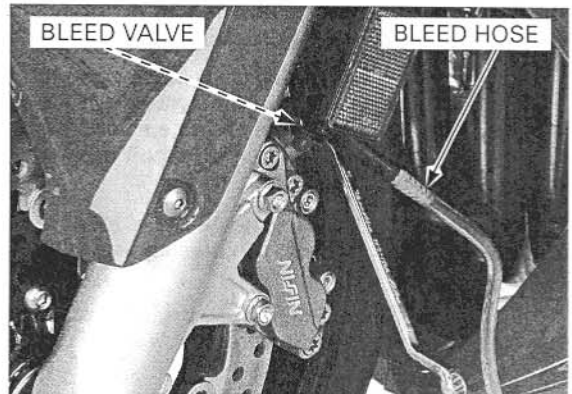

Loosen the bleed valve and pump the brake lever or pedal.  
Stop pumping the lever or pedal when no more fluid flows out of the bleed valve.

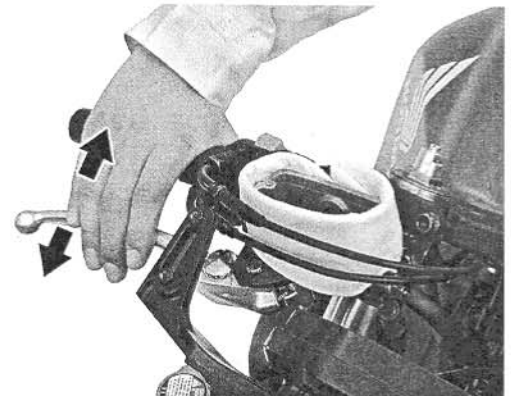

### BRAKE FLUID FILLING/AIR BLEEDING

Fill the reservoir with DOT 4 brake fluid from a sealed container.

#### NOTE:

- Use only DOT 4 brake fluid from a sealed container.
- Do not mix different types of fluid. There are not compatible.

Connect a commercially available brake bleeder to the bleed valve.

Operate the brake bleeder and loosen the bleed valve.

If not using an automatic refill system, add brake fluid when the fluid level in the reservoir is low.

- Check the fluid level often while bleeding the brakes to prevent air from being pumped into the system.
- When using a brake bleeding tool, follow the manufacturer's operating instructions.

