

ELECTRIC STARTER

STARTER MOTOR


REMOVAL

- With the ignition switch OFF, remove the negative cable at the battery before servicing the starter motor.

Drain the coolant (page 7-6).

Remove the throttle body (page 6-72).


Disconnect the ECT sensor connector and remove the thermostat housing (page 7-9).

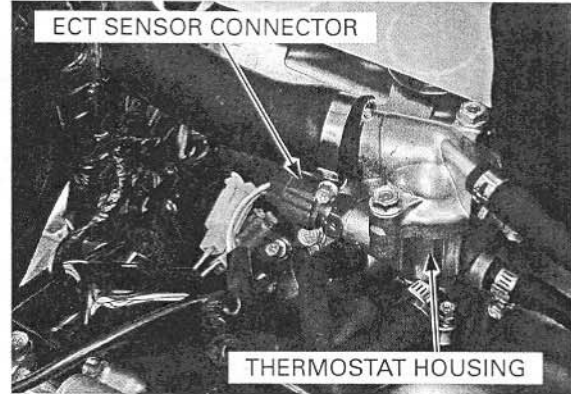

Remove the terminal nut and starter motor cable from the starter motor.

Remove the starter motor mounting bolts and ground cable.

Pull the starter motor out of the crankcase.

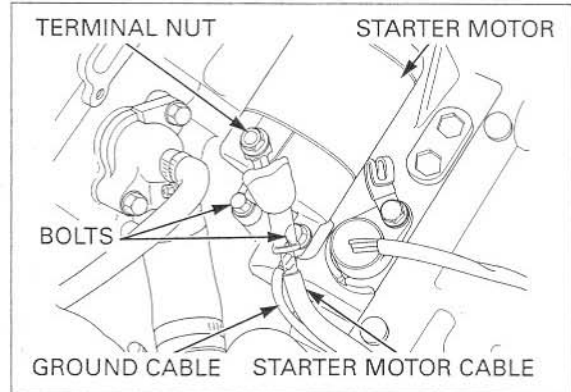

DISASSEMBLY

Remove the following:

- O-ring

