


## IGNITION SWITCH

### INSPECTION

Remove the fuel tank cover (page 3-15).


Disconnect the ignition switch wire 4P (Natural) connector.

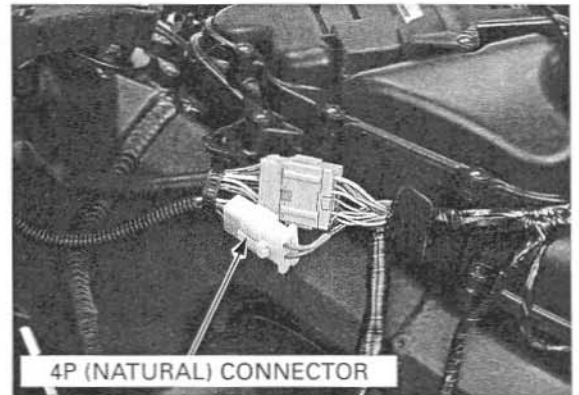

Check for continuity between the wire terminals of the ignition switch connector in each switch position.

Continuity should exist between the color coded wires as follow:

	BAT	IG	IV	KEY
ON	○	○	○	KEY ON
OFF		○	○	KEY OFF
LOCK		○	○	KEY OFF LOCK PIN

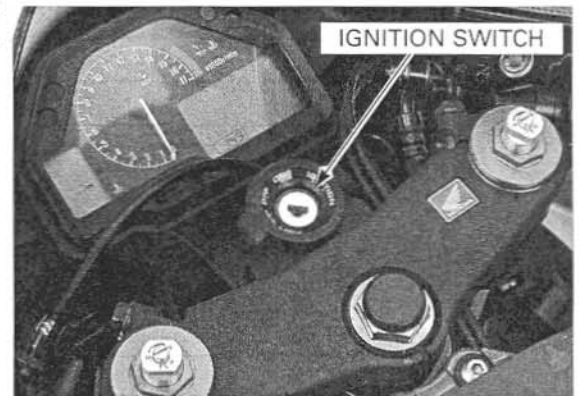


### REMOVAL/INSTALLATION

Remove the fuel tank cover (page 3-15).

Remove the upper cowl (page 3-9).

Disconnect the ignition switch wire 4P (Natural) connector.

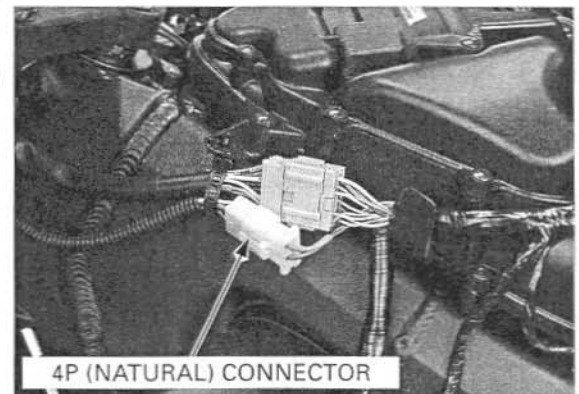

Remove the bolts and ignition switch.

Install the ignition switch to the top bridge. Tighten the new ignition switch mounting bolts to the specified torque.

**TORQUE: 25 N·m (2.5 kgf·m, 18 lbf·ft)**

Install the removed parts in the reverse order of removal.

