

23. INDEX

ABSOLUTE PRESSURE FUEL SUPPLY SYSTEM	2-2
AIR CLEANER	4-6
AIR CLEANER HOUSING	6-64
AIR DUCT COVERS	3-9
ALTERNATOR CHARGING COIL	17-9
ALTERNATOR COVER INSTALLATION	11-7
ALTERNATOR COVER REMOVAL	11-4
BANK ANGLE SENSOR	6-93
BATTERY	17-5
BATTERY TRAY	17-7
BATTERY/CHARGING SYSTEM SPECIFICATIONS	1-10
BODY PANEL LOCATIONS	3-2
BRAKE FLUID	4-25
BRAKE FLUID REPLACEMENT/AIR BLEEDING	16-6
BRAKE LIGHT SWITCH	
LIGHTS/METERS/SWITCHES	20-21
MAINTENANCE	4-27
BRAKE PAD WEAR	4-26
BRAKE PAD/DISC	16-9
BRAKE PEDAL	16-29
BRAKE SYSTEM	4-26
BRAKE/TAIL LIGHT	20-9
CABLE & HARNESS ROUTING	1-22
CAM CHAIN TENSIONER LIFTER	9-34
CAM PULSE GENERATOR	6-90
CAMSHAFT INSTALLATION	9-26
CAMSHAFT REMOVAL	9-8
CHARGING SYSTEM INSPECTION	17-9
CLUTCH	10-7
CLUTCH SWITCH	20-21
CLUTCH SYSTEM	4-28
CLUTCH/STARTER CLUTCH/	
GEARSHIFT LINKAGE SPECIFICATIONS	1-7
COMBINATION METER	20-11
COMPONENT LOCATION	
ALTERNATOR	11-2
CLUTCH/STARTER CLUTCH/	
GEARSHIFT LINKAGE	10-2
CRANKCASE/TRANSMISSION	12-2
CRANKSHAFT/PISTON/CYLINDER	13-2
CYLINDER HEAD/VALVES	9-2
ENGINE REMOVAL/INSTALLATION	8-2
FRONT WHEEL/SUSPENSION/STEERING	14-2
FUEL SYSTEM (Programmed Fuel Injection)	6-2
HYDRAULIC BRAKE	16-2
REAR WHEEL SUSPENSION	15-2
COOLANT REPLACEMENT	7-6
COOLING SYSTEM	4-19
COOLING SYSTEM SPECIFICATIONS	1-6
CRANKCASE ASSEMBLY	12-16
CRANKCASE SEPARATION	12-5
CRANKCASE/TRANSMISSION SPECIFICATIONS	1-8
CRANKPIN BEARING	13-11
CRANKSHAFT	13-5
CRANKSHAFT/PISTON/CYLINDER SPECIFICATIONS	1-8
CYLINDER COMPRESSION TEST	9-6
CYLINDER HEAD ASSEMBLY	9-22
CYLINDER HEAD COVER ASSEMBLY	9-31
CYLINDER HEAD COVER DISASSEMBLY	9-7
CYLINDER HEAD COVER INSTALLATION	9-32
CYLINDER HEAD COVER REMOVAL	9-6
CYLINDER HEAD DISASSEMBLY	9-15
CYLINDER HEAD INSPECTION	9-16
CYLINDER HEAD INSTALLATION	9-24
CYLINDER HEAD REMOVAL	9-13
CYLINDER HEAD/VALVES SPECIFICATIONS	1-7
DIODE	19-14
DRIVE CHAIN	4-21
DTC CODE INDEX	6-33
DTC TROUBLESHOOTING	6-37
DUAL SEQUENTIAL FUEL INJECTION SYSTEM	
(PGM-DSFI)	2-3
ECT SENSOR	
LIGHT/METER/SWITCH	20-16
ECT/THERMO SENSOR	
FUEL SYSTEM (Programmed Fuel Injection)	6-89
ELECTRIC STARTER SPECIFICATIONS	1-10
EMISSION CONTROL INFORMATION LABELS	
(U.S.A. only)	1-39
EMISSION CONTROL SYSTEMS	1-36
ENGINE & FRAME TORQUE VALUES	1-12
ENGINE CONTROL MODULE (ECM)	
FUEL SYSTEM (Programmed Fuel Injection)	6-94
ENGINE DOES NOT STAR OR IS HARD TO START ...	22-2
ENGINE IDLE SPEED	4-18
ENGINE INSTALLATION	8-10
ENGINE LACKS POWER	22-3
ENGINE OIL/OIL FILTER	4-15
ENGINE REMOVAL	8-5
ENGINE STOP RELAY	6-94
EVAP PURGE CONTROL VALVE	
(California type only)	6-98
EVAPORATIVE EMISSION CONTROL SYSTE	
(CALIFORNIA TYPE ONLY)	4-20
EXHAUST PIPE	3-24
FAN CONTROL RELAY	7-18
FAST IDLE WAX UNIT	6-81
FLYWHEEL	11-5
FORK	14-18
FRONT BRAKE CALIPERS	16-22
FRONT FENDER	3-15
FRONT MASTER CYLINDER	16-13
FRONT WHEEL	14-12
FRONT WHEEL/SUSPENSION/STEERING	
SPECIFICATIONS	1-9
FUEL CUT-OFF RELAY	6-60
FUEL LEVEL SENSOR	20-18
FUEL LINE	4-5
FUEL LINE INSPECTION	6-56
FUEL PUMP UNIT	6-58
FUEL SYSTEM (Programmed Fuel Injection)	
SPECIFICATIONS	1-6
FUEL TANK	6-61
FUEL TANK COVER	3-15
GEARSHIFT LINKAGE	10-22
GENERAL SPECIFICATIONS	1-4
HANDLEBAR SWITCHES	20-20
HANDLEBARS	14-7
HEADLIGHT	20-6
HEADLIGHT AIM	4-28
HEADLIGHT RELAY	20-25
HORN	20-24
HYDRAULIC BRAKE SPECIFICATIONS	1-10
IAT SENSOR	6-89
IGNITION PULSE GENERATOR	18-7
IGNITION SWITCH	20-19
IGNITION SYSTEM INSPECTION	18-5
IGNITION SYSTEM SPECIFICATIONS	1-10
IGNITION TIMING	18-7
LICENCE LIGHT	20-10
LIGHTS	20-2
LIGHTS/METERS/SWITCHES	20-2
LIGHTS/METERS/SWITCHES SPECIFICATIONS	1-11
LOWER COWLS	3-6
LOWER INJECTOR	6-79
LUBRICATION & SEAL POINTS	1-19
LUBRICATION SYSTEM DIAGRAM	5-2
LUBRICATION SYSTEM SPECIFICATIONS	1-6