

## TECHNICAL FEATURES

<WHEN ECM STOPS FUEL PUMP OPERATION AS MALFUNCTION ON CKP SENSOR etc. IS DETECTED (FAIL SAFE OPERATED)>

1. Fuel pump relay is turned OFF as ECM shuts off the power supplied to coil side of fuel pump relay.
2. Fuel pump operation stops.

