

FRONT COVER

REMOVAL/INSTALLATION

Remove the following:


- Front center cover (page 3-4)
- Floor panel side cover (page 3-5)

Remove the following:

- Four screws from the front upper side
- Two screws from the front lower side
- Two screws from the rear side

Unhook the four bosses by slightly spreading the front cover, remove the front cover and disconnect the front turn signal light 2P connectors.

Installation is in the reverse order of removal.

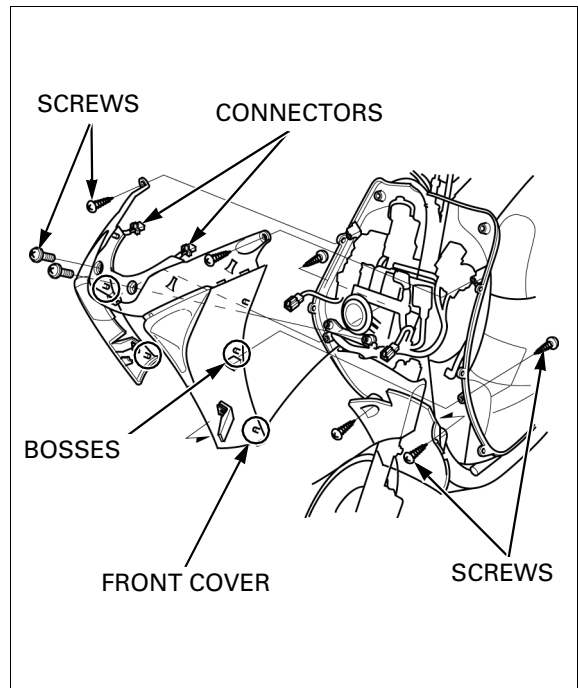


REAR VIEW MIRROR

REMOVAL/INSTALLATION

Remove the adapters and rear view mirrors.

Installation is in the reverse order of removal.

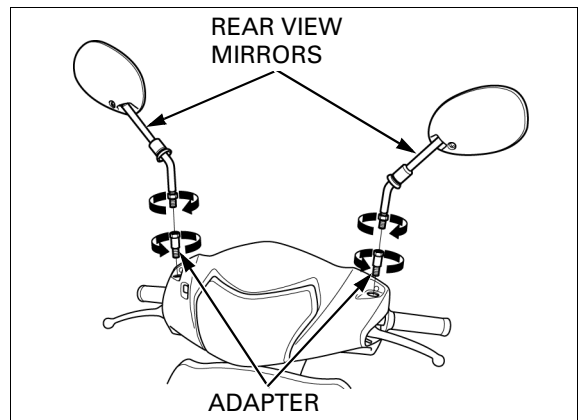

FRONT HANDLEBAR COVER

REMOVAL/INSTALLATION

Remove the rear view mirrors (page 3-6).

Remove the following:

- Two screws from the front side
- Two screws from the rear side
- Two screws from the both side

Remove the handlebar cover.

Disconnect the headlight 4P connector.

Installation is in the reverse order of removal.

