

FRONT INNER COVER

REMOVAL/INSTALLATION

Remove the following:

- Front center cover (page 3-4)
- Floor panel (page 3-11)

Remove the following:

- Two screws from the inner cover front side
- Two screws from the inner cover rear side


Release the following:

- ECM grommet from the front inner cover stay
- Turn signal relay grommet and starter relay grommet from the front inner cover stay

Open the inner box, then remove the bolt and luggage hook.

Release the two bosses from the holes and remove the front inner cover.

Installation is in the reverse order of removal.

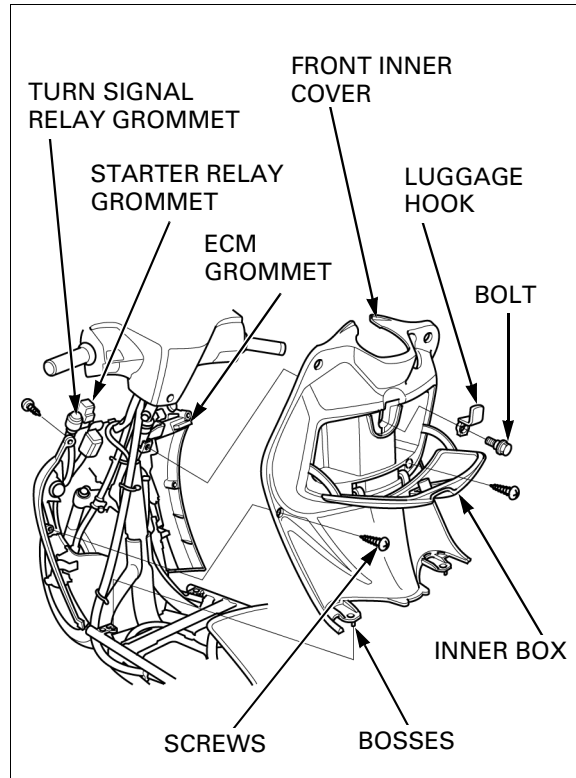

REAR FENDER

REMOVAL/INSTALLATION

Remove the body cover (page 3-9).

Release the following:

- Radiator reserve tank overflow hose
- Siphon hose

Disconnect the license light 3P connector.

Remove the rear fender by slightly pulling it backward and releasing the tab and bosses.

Installation is in the reverse order of removal.

