


ENGINE OIL STRAINER SCREEN

Drain the engine oil (page 4-11).

Remove the engine oil strainer screen cap, O-ring, spring.

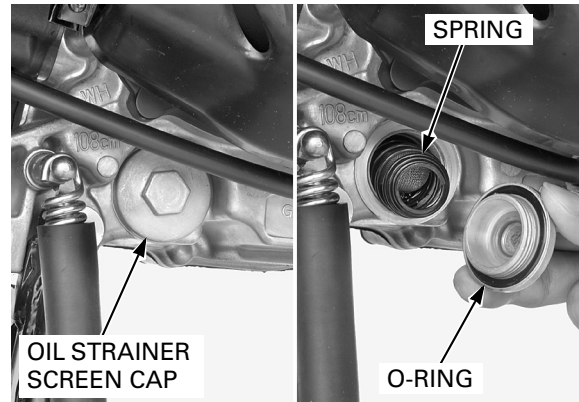

Remove the engine oil strainer screen.

Wash the strainer screen thoroughly in non-flammable or high flash point cleaning solvent until all accumulated dirt has been removed. Blow it dry with compressed air to clean completely.

Before installing the strainer screen, it should be examined closely for damage and make sure the sealing rubber is in good condition.



Make sure the O-ring is in good condition and replace it if necessary.

Install the engine oil strainer screen and spring with the strainer sealing rubber facing the crankcase.

Coat the O-ring with engine oil and install the engine oil strainer screen cap.

Tighten the engine oil strainer screen cap to the specified torque.

TORQUE: 20 N·m (2.0 kgf·m, 15 lbf·ft)

Fill the crankcase with recommended engine oil and check the engine oil level (page 4-10).

Make sure that there are no oil leaks.

